WF0802W8(E/N/S/V/W) WF0802X8(E/N/S/V/W)
WF0804W8(E/N/S/V/W) WF0804X8(E/N/S/V/W)
WF0802Y8(E/N/S/V/W) WF0806X8(E/N/S/V/W)
WF0804Y8(E/N/S/V/W) WF0802Z8(E/N/S/V/W)
WF0804Z8(E/N/S/V/W)
WF0806Z8(E/N/S/V/W)

Washing Machine

user manual

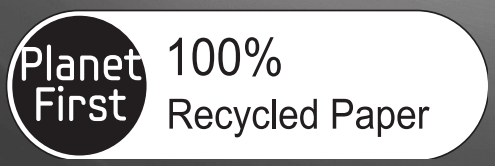

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please
register your product at

www.samsung.com/register

CE

SAMSUNG

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its specialised Eco Bubble function to its energy efficiency, your new Samsung washing machine has all the benefits to make washing laundry as easy and pleasant as possible.

- **Energy Saving**
  This model offers more efficient energy use compared to standard A rated machine with the special Bubble generator system and Quiet Drive inverter motor.
- **Eco Bubble Wash**
  Samsung's effective Eco Bubble delivers improved cleanliness with advanced fabric care. Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.
- **VRT PLUS™ (Vibration Reduction Technology , Selected Models)**
  This Samsung washer performs very quietly minimizing noise and vibration with 3D vibration sensors and smart control technology, which enables it to maintain the lowest possible vibration. Thus, the drum keeps perfect balance.
- **Quick Wash**
  No time to waste! Quick Wash program can help your busy life - now you can wash your favorite clothes (up to 2Kg) in 15 minutes!
- **Quiet Drive Motor**
  Samsung's unique Quiet Drive Motor works without belts or gears, reducing vibration and making the washer quieter and more durable.
- **Eco Drum Clean**
  Using Ecol Drum Clean helps to keep washing machine clean even without any chemical detergent or bleach. Keep your drum clean and odorless with specialized cleaning program.
- **Baby Care**
  Your Samsung washing machine includes wash programs that add protection to the clothing of children with sensitive skin. These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.
- **Wool Certified**
  The machine has been tested and passed the required Woolmark Company specification for machine washable wool products. This mark is the upgraded certification better than the existing Woolmark, which guarantees not only washing performance but also fabric care for wool products. Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.
- **Hand Wash**
  Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.
- **Delay End**
  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

WF0804Y8E-02842J_EN.indd 2 2011-5-24 16:07:45

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine. This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Digital Graphic Display**

  The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- **Wide door**

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 37 tells you what to do if something goes wrong with your new washing machine.

WF0804Y8E-02842J_EN.indd 3 2011-5-24 16:07:45

safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

WARNING	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
CAUTION	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WF0804Y8E-02842J_EN.indd 4 2011-5-24 16:07:47

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

INSTRUCTION ABOUT THE WEEE MARK

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

WF0804Y8E-02842J_EN.indd 5 2011-5-24 16:07:47

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220-240V / 50Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature
- Frost may cause tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WF0804Y8E-02842J_EN.indd 6 2011-5-24 16:07:48

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, Turn off the water & power supply immediately and contact your nearest service centre.

- Do not Touch the power plug with wet hands.
- Failure to do so may cause electric shock.

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WF0804Y8E-02842J_EN.indd 7 2011-5-24 16:07:48

safety information

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance.

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WF0804Y8E-02842J_EN.indd 8 2011-5-24 16:07:48

CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.
Open the Water Tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).

- If the door is not closed completely, it may result in water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

WF0804Y8E-02842J_EN.indd 9 2011-5-24 16:07:48

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.
- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.
- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.
- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.
- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.
- This may result in burns.

Do not insert your hand into the detergent box after opening it.
- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.
- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.
- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.
- This may result in problems with the washer.

WF0804Y8E-02842J_EN.indd 10 2011-5-24 16:07:48

Do not use natural hand-washing soap for the washer.
- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.
- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.
- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

WF0804Y8E-02842J_EN.indd 11 2011-5-24 16:07:48

contents

SETTING UP YOUR WASHING MACHINE 13

13 Checking the parts
14 Meeting installation requirements
14 Electrical supply and grounding
14 Water Supply
15 Drain
15 Flooring
15 Surrounding temperature
15 Alcove or closet installation
15 Installing your washing machine

WASHING A LOAD OF LAUNDRY 21

21 Washing for the first time
21 Basic instructions
22 Using the control panel
25 Child lock
25 Sound off
26 Delay end
26 My cycle
27 Eco Bubble
28 Washing clothes using the cycle selector
29 Washing clothes manually
29 Laundry guidelines
30 Detergent and additives information
30 Which detergent to use
31 Detergent drawer
31 Liquid Detergent (Selected models)

CLEANING AND MAINTAINING YOUR WASHING MACHINE 32

32 Eco Drum Clean
33 Draining the washing machine in an emergency
34 Cleaning the debris filter
34 Cleaning the exterior
35 Cleaning the detergent drawer and drawer recess
35 Cleaning the water hose mesh filter
36 Repairing a frozen washing machine
36 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 37

37 Check these points if your washing machine...
38 Information codes

CYCLE CHART 39

39 Cycle chart (NORMAL Models : WF08**Y** / WF08**W** Series)
40 Cycle chart (VRT Models: WF08**X** / WF08**Z** Series)

APPENDIX 41

41 Fabric care chart
41 Protecting the environment
41 Declaration of conformity
42 Specifications

WF0804Y8E-02842J_EN.indd 12 2011-5-24 16:07:49

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

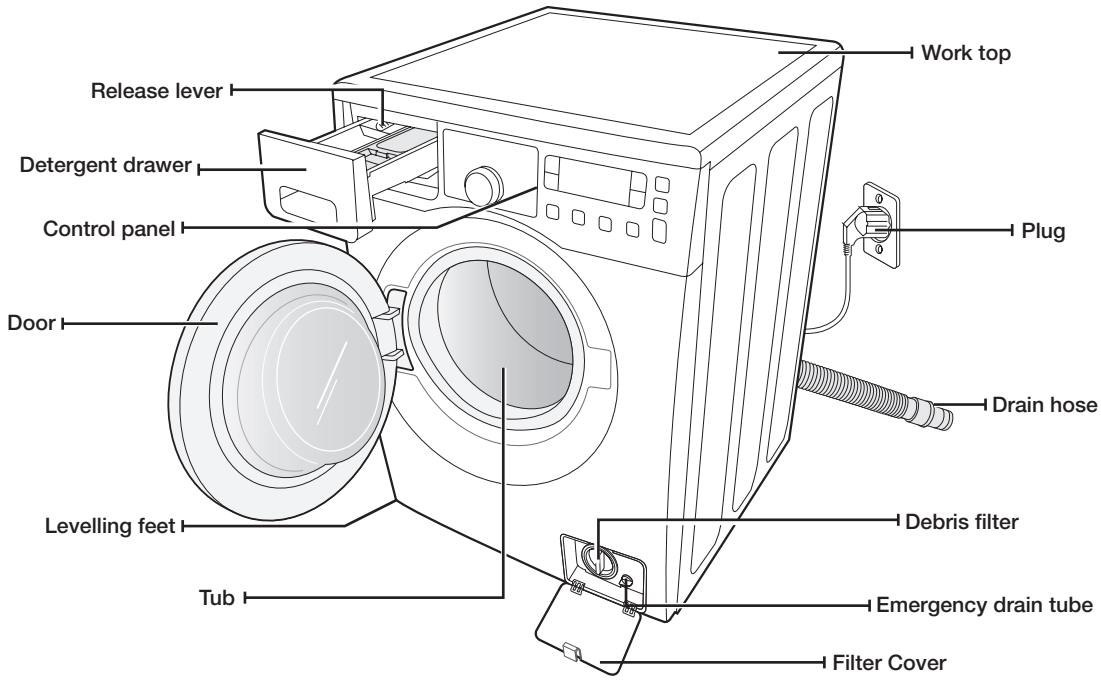

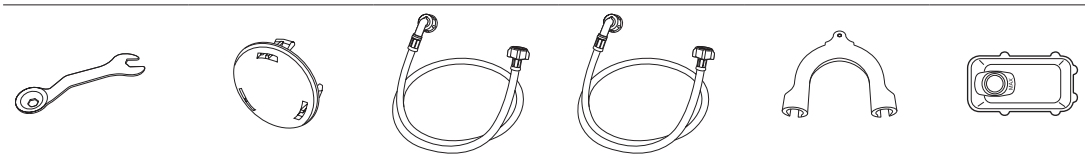

Spanner	* Bolt hole covers	Cold	Hot (Selected model)	Hose guide	Liquid detergent box (Selected model)
		Water supply hose			

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

WF0804Y8E-02842J_EN.indd 13 2011-5-24 16:07:50

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- AC 220-240V / 50Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WF0804Y8E-02842J_EN.indd 14 2011-5-24 16:07:50

Drain

Samsung recommends a standpipe height of 65cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 50 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WF0804Y8E-02842J_EN.indd 15 2011-5-24 16:07:50

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

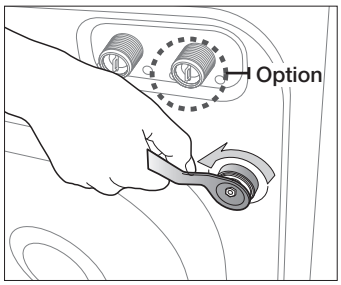

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

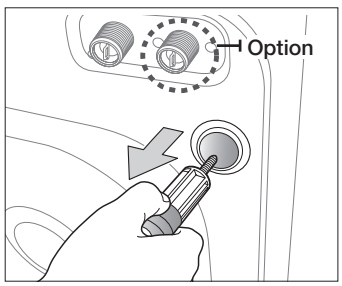

3. Fill the holes with the supplied plastic covers.

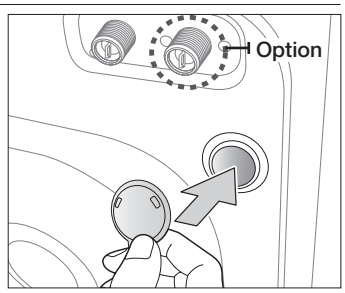

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WF0804Y8E-02842J_EN.indd 16 2011-5-24 16:07:51

STEP 3
Adjusting the Levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the levelling feet in and out as necessary by hand.

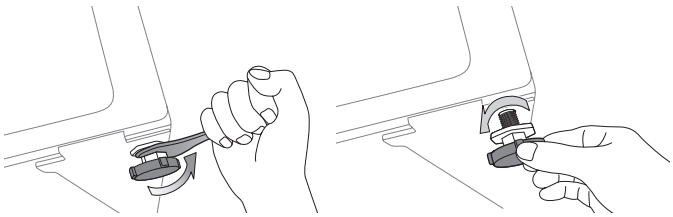

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

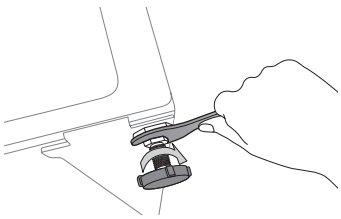

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

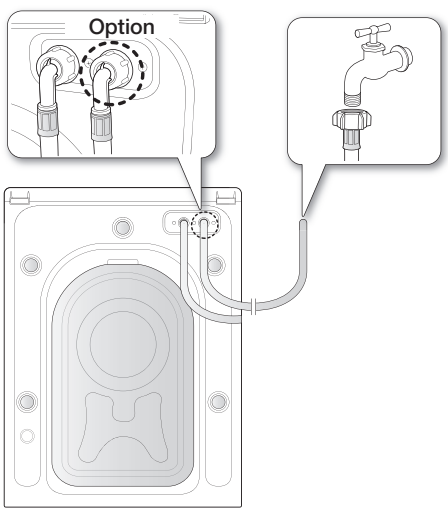

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WF0804Y8E-02842J_EN.indd 17 2011-5-24 16:07:52

setting up your washing machine

Connecting the water supply hose

1. Remove the adaptor from the water supply hose.

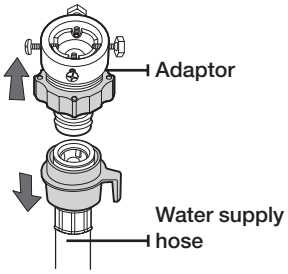

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

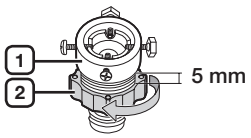

3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

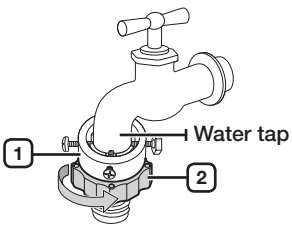

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

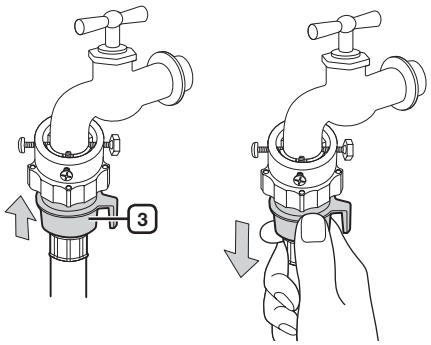

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

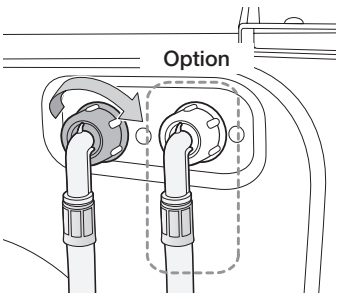

WF0804Y8E-02842J_EN.indd 18 2011-5-24 16:07:54

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

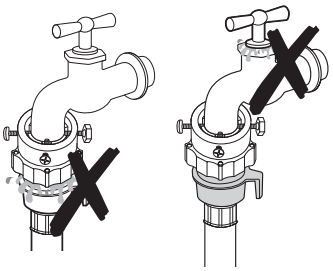

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

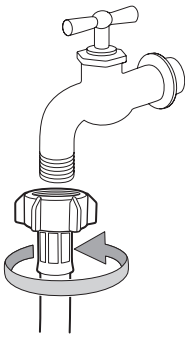

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

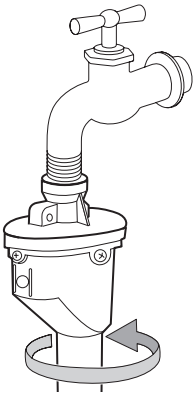

WF0804Y8E-02842J_EN.indd 19 2011-5-24 16:07:55

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

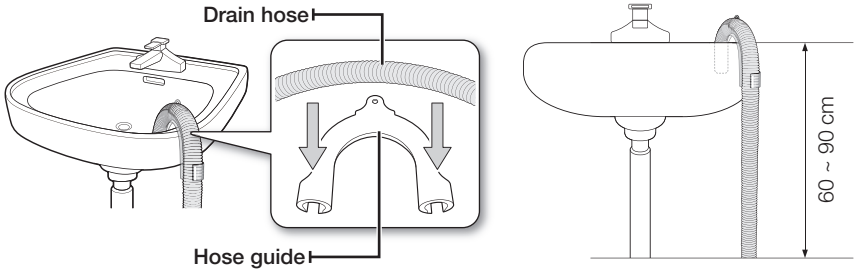

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

The standpipe drain requires;
- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

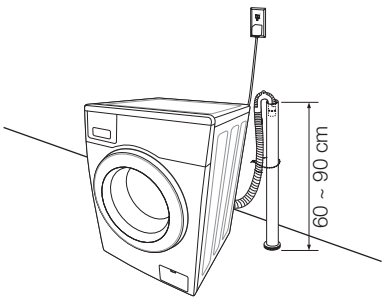

STEP 5
Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240V / 50Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)

WF0804Y8E-02842J_EN.indd 20 2011-5-24 16:07:57

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

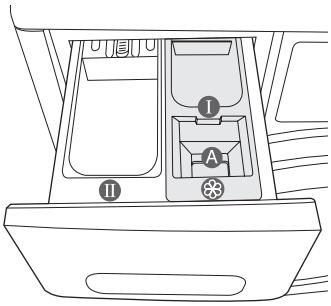

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

To use liquid detergent, use the liquid detergent box (refer to page 31 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A").

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 30.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
- Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
- Do not wash water-proofed items in normal cycle except outdoor care program.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WF0804Y8E-02842J_EN.indd 21 2011-5-24 16:07:58

washing a load of laundry

USING THE CONTROL PANEL

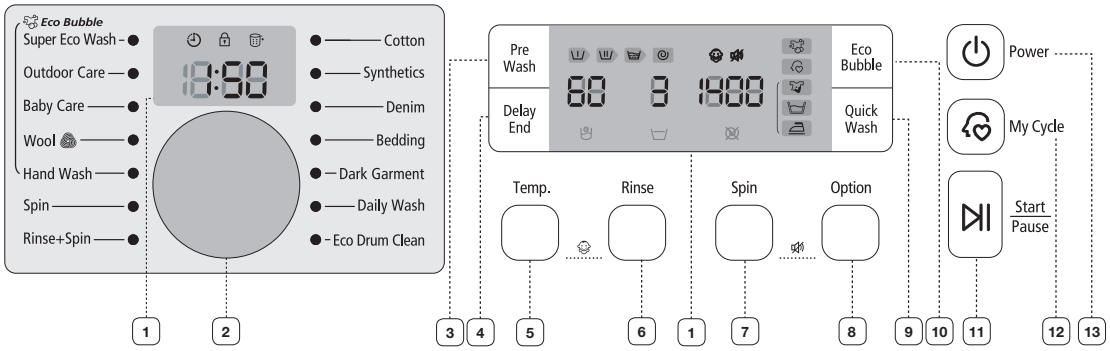

1 DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
2 CYCLE SELECTOR	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to “Washing clothes using the cycle selector”. (see page 28) **Cotton** - For average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Denim** - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing. **Bedding** - For bed spread, bed sheet, duvet cover etc. Wash under 2kg and only 1 kind of bedding to achieve the best result. **Dark Garment** - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly. **Daily Wash** - Use for everyday items such as underwear and shirts. **Eco Drum Clean** - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed. **Super Eco Wash** - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving. **Outdoor Care** - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber. **Baby Care** - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes.

WF0804Y8E-02842J_EN.indd 22 2011-5-24 16:07:58

	Wool - Only for machine-washable wool. A load should be less than 2.0 kg. • The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. • Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M1124 (Certificate Number issued by I.W.S. Nominee Co., Ltd.) **Hand Wash** - A very light wash cycle as gentle as a hand wash. **Spin** - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.
3 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Baby Care.
4 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WF0806 : , 400, 800, 1200, 1400, 1600 rpm WF0804 : , 400, 800, 1200, 1400 rpm WF0802 : , 400, 800, 1000, 1200 rpm "No spin " - The laundry remains in the drum and no spin cycle is performed after the final drain.
8 **OPTION SELECTION BUTTON**	Press this button repeatedly to cycle through the options: Easy Iron → Soak → Intensive → Easy Iron + Soak → Easy Iron + Intensive → Soak + Intensive → Easy Iron + Intensive + Soak → off "Easy Iron": Use this option to prepare your laundry so that it can be easily ironed. "Soak": Use this option to effectively remove stains from your laundry by soaking your laundry. • The Soak function is performed 13 minutes into the wash cycle. • The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. • The Soak function is only available for the following wash programs: Cotton, Synthetics, Denim, Bedding, Daily Wash, Baby Care. "Intensive": Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.

WF0804Y8E-02842J_EN.indd 23 2011-5-24 16:07:59

washing a load of laundry

9 **QUICK WASH SELECTION BUTTON**	For lightly soiled garments and less than 2kg laundry that you require quickly. It takes about minimum 15 minute, but can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent unbalaced load, fluctuation in the electricity supply and extra options selected. • Press this button repeatedly to choose cycle time: 15min → 20min → 30min → 40min → 50min → 60min → Off ⚠ WARNING Powdered/Liquid detergent should be under 20g(for 2kg load) or detergent may remain on the clothes.
10 **ECO BUBBLE SELECTION BUTTON**	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. • Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). • Other wash cycles do not need this option and automatically turn the Generator OFF. • On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 27 for more information).
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **MY CYCLE SELECTION BUTTON**	Choose your favorite cycle including temperature, spin, soil level, option, etc.
13 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WF0804Y8E-02842J_EN.indd 24 2011-5-24 16:08:00

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "**Child Lock**" will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

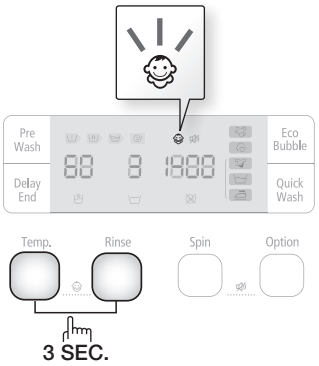

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Option** buttons at the same time for 3 seconds. The "**Sound Off**" will be lit when this feature is activated.

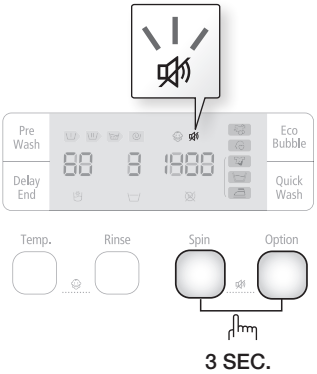

WF0804Y8E-02842J_EN.indd 25 2011-5-24 16:08:01

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

My cycle

Allows you to activate your custom wash (temperature, spin, soil level, etc.) with one button convenience.

By pushing the **My Cycle** button, press the My Cycle button to load and use the saved My Cycle options. The "My Cycle" light will indicate activation. Also, the chosen course and option lights will flicker.

You can set all options as follows in the My Cycle mode.

1. Turn the water supply on.
2. Press the **Power** button.
3. Select cycle using the **Cycle Selector**.
4. After cycle selection, set each option.

See the "Cycle Chart" on page 39 for available option settings with each cycle.

5. You can then store the selected cycle and options by pressing and holding the **My Cycle** button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.

You can change the My Cycle settings by repeating the same process above.
The last used setting will be displayed the next time you choose the My Cycle function.

If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

WF0804Y8E-02842J_EN.indd 26 2011-5-24 16:08:02

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

The bubble function is available in all courses except for Eco Drum Clean course and the function availability is as follows.

Course	Bubble function	Canceling the bubble function
Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash	Available	Available
Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash		Not available
Eco Drum Clean	Not available	-

- A different bubble function may be applied depending the course.

Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power** button.
3. Select a function.
4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.
   - Add the appropriate amount of detergent into the detergent compartment Ⅱ, and add the fabric softener to softener compartment ❀ just under the fiber softener base line (MAX) of “A”).
   - When the Prewash course is selected, add detergent into the prewash compartment Ⅰ as well.
   - To use liquid detergent, leave the liquid detergent box in the drawer(refer to “Liquid Detergent” section on page 31).

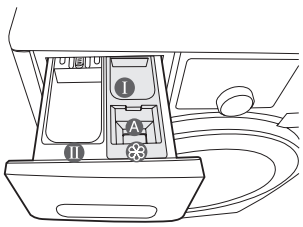

Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
   - Press the **Start/Pause** button to start the wash.
   - The amount of the laundry is automatically detected and the laundry is washed.
   - Once a washing machine operation begins, you cannot add or select the bubble function.

- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

WF0804Y8E-02842J_EN.indd 27 2011-5-24 16:08:02

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Baby care cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WF0804Y8E-02842J_EN.indd 28 2011-5-24 16:08:02

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.(⊗ : No Spin)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.
Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.
Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

WF0804Y8E-02842J_EN.indd 29 2011-5-24 16:08:03

washing a load of laundry

Determining the load capacity
Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WF0806 / WF0804 / WF0802
Cotton **- average/lightly soiled** **- heavily soiled**	8.0 kg
Synthetics	3.0 kg
Denim	3.0 kg
Bedding	2.0 kg
Outdoor Wear	2.0 kg
Wool	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvet cover, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Duvet cover, the recommended load capacity is 2.0 kg or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

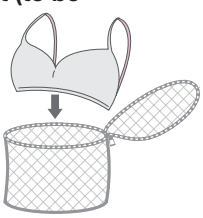

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

WF0804Y8E-02842J_EN.indd 30 2011-5-24 16:08:03

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.

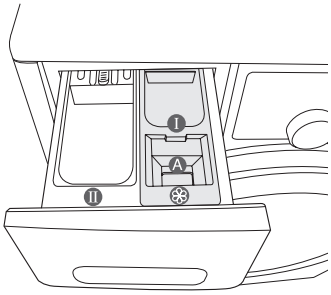

To use liquid detergent, use the liquid detergent box (refer to “Liquid Detergent” for the corresponding model).

- Do not add powdered detergent into the liquid detergent box.

3. Add the recommended amount of fabric softener into the softener compartment ❀ if required. DO NOT exceed the MAX FILL (Ⓐ) line.

CAUTION Do NOT add any powder/liquid **detergent** to the softener compartment (❀).

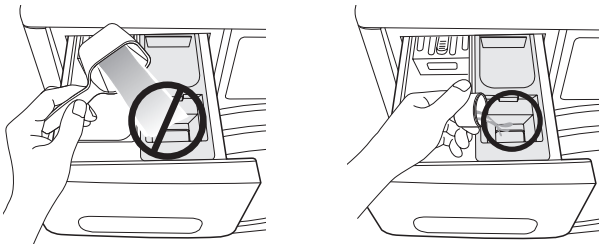

4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⓘ.

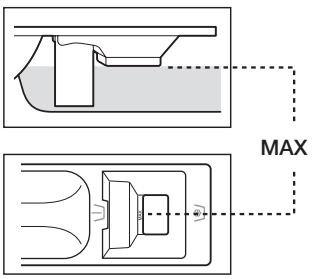

When washing large items do NOT use the following detergetnt types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).

Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

- DO NOT fill above the MAX line.
- When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.

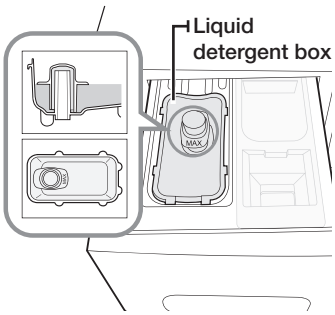

WF0804Y8E-02842J_EN.indd 31 2011-5-24 16:08:04

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.

1. Press the **Power** button.
2. Turn the **Cycle Selector** to the ECO Drum Clean course.
   - You can only use the Delay End function.
   - The water temperature during the ECO Drum Clean is set to 70 ˚C.

   You cannot change the temperature.

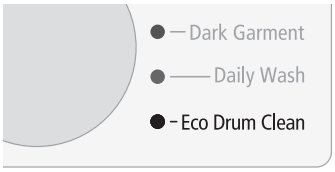

3. Place the appropriate amount of cleansing agent into the detergent compartment Ⅱ and close the detergent drawer (when cleaning the drum using a cleansing agent).
   - Be sure to use the recommended cleansing agent for cleaning the drum.
   - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

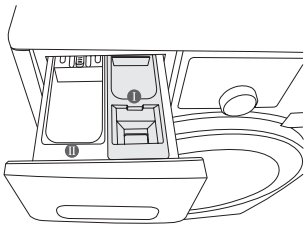

4. Press the **Start/Pause** button.
   - If you press the **Start/Pause** button, the ECO Drum Clean course begins.

CAUTION

- Using the ECO Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the ECO Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
- **In the ECO Drum Clean course, never use normal detergent.**
- **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
- Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].

WF0804Y8E-02842J_EN.indd 32 2011-5-24 16:08:05

The ECO Drum Clean Auto Alarm Function

- If the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO Drum Clean course.
- If you do not perform the ECO Drum Clean course, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned off. However, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.
- Although generally, the ECO Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.

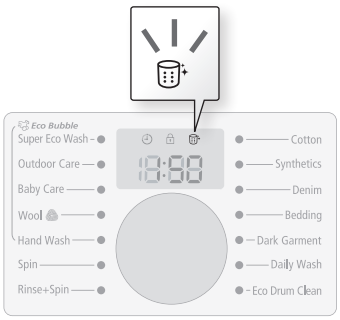

- **In case of the alarm, please also clean the debris filter (refer to “Cleaning the debris filter” section on page 34). Otherwise the performance of the bubble function may lower down.**

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover by pressing down and pulling its handle.

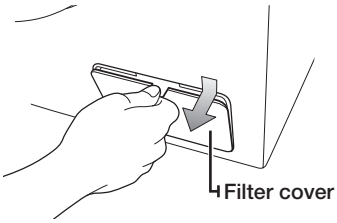

3. Open the emergency drain cap by pulling it.

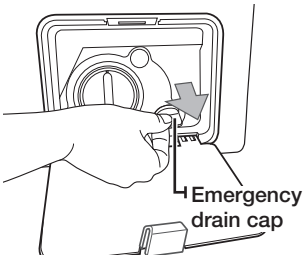

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.

Remain water maybe more than you expected. Prepare larger bowl.

6. Reinsert the emergency drain cap and the drain tube.
7. Replace the filter-cover.

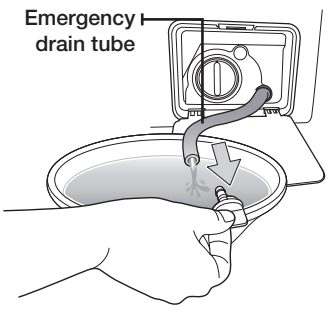

WF0804Y8E-02842J_EN.indd 33 2011-5-24 16:08:07

cleaning and maintaining your washing machine

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous section.)
If foreign substances accumulate debris filter, the performance of the bubble function will be degraded.

CAUTION Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to "Draining the washing machine in an emergency" on page 33.)

   If you separate the filter without draining the remaining water, the remaining water may trickle out.
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.

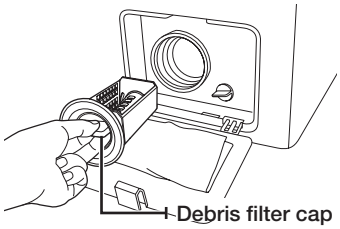

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

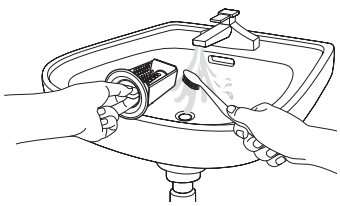

CAUTION Do not open the debris filter cap while the machine is running or hot water may flow out.

- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WF0804Y8E-02842J_EN.indd 34 2011-5-24 16:08:07

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the softener divider and the liquid detergent box(option) from the detergent drawer.

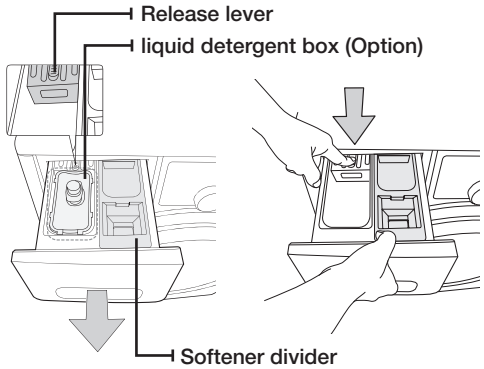

3. Wash all parts under running water.

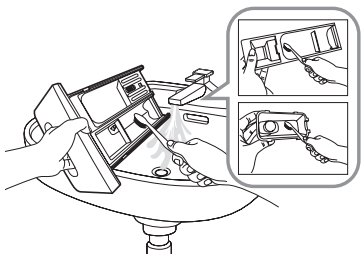

4. Clean the drawer recess with an old toothbrush.
5. Replace the softener divider and the liquid detergent box (option) by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

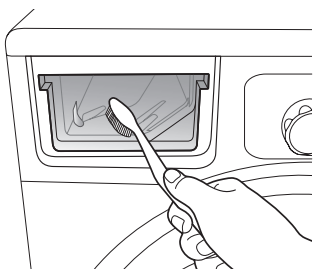

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

WF0804Y8E-02842J_EN.indd 35 2011-5-24 16:08:09

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the **Cotton** cycle and add bleach to the bleach compartment. Then, push the **Quick Wash** button and run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WF0804Y8E-02842J_EN.indd 36 2011-5-24 16:08:10

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WF0804Y8E-02842J_EN.indd 37 2011-5-24 16:08:10

troubleshooting and information codes

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door. • Make sure the door is firmly closed.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly. • Clean the water hose mesh filter.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E/Uc	• Call the after-sales service.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WF0804Y8E-02842J_EN.indd 38 2011-5-24 16:08:10

cycle chart

CYCLE CHART (NORMAL MODELS : WF08**W** / WF08**Y** SERIES)

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Max Temp (˚C)	Spin Speed(MAX) rpm	
		Pre-wash	wash	Softener		WF0804	WF0802
Cotton	8.0	●	yes	●	95	1400	1200
Synthetics	3.0	●	yes	●	60	1200	1200
Denim	3.0	●	yes	●	60	800	800
Bedding	2.0	●	yes	●	40	800	800
Dark Garment	4.0	●	yes	●	40	1200	1200
Daily Wash	3.0	●	yes	●	60	1400	1200
Eco Drum Clean	-	-	-	-	70	400	400
Super Eco Wash	4.0	-	yes	●	40	1200	1200
Outdoor Care	2.0	-	yes	●	40	1200	1200
Baby Care	4.0	●	yes	●	95	1400	1200
Wool	2.0	-	yes	●	40	800	800
Hand Wash	2.0	-	yes	●	40	400	400

PROGRAM	Eco Bubble	Intensive	Soak	Easy Iron	Delay end	Quick Wash	Cycle time (min)
Cotton	●	●	●	●	●	●	110
Synthetics	●	●	●	●	●	-	80
Denim	●	●	●	●	●	-	68
Bedding	●	●	●	●	●	-	87
Dark Garment	●	●	-	●	●	-	73
Daily Wash	●	-	●	●	●	-	54
Eco Drum Clean	-	-	-	-	●	-	86
Super Eco Wash	●	●	-	●	●	-	92
Outdoor Care	●	-	-	-	●	-	77
Baby Care	●	●	●	●	●	-	133
Wool	●	-	-	-	●	-	55
Hand Wash	●	-	-	-	●	-	31

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Cotton 60˚C + intensive + Eco bubble are programs according to EN60456.
4. Daily Wash : Short program for test institutes.
5. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
6. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WF0804Y8E-02842J_EN.indd 39 2011-5-24 16:08:10

cycle chart

CYCLE CHART (VRT MODELS: WF08**X** / WF08**Z** SERIES)

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Max Temp (℃)	Spin Speed(MAX) rpm		
		Pre-wash	wash	Softener		WF0806	WF0804	WF0802
Cotton	8.0	●	yes	●	95	1600	1400	1200
Synthetics	3.0	●	yes	●	60	1200	1200	1200
Denim	3.0	●	yes	●	60	800	800	800
Bedding	2.0	●	yes	●	40	800	800	800
Dark Garment	4.0	●	yes	●	40	1200	1200	1200
Daily Wash	3.0	●	yes	●	60	1400	1400	1200
Eco Drum Clean	-	-	-	-	70	400	400	400
Super Eco Wash	4.0	-	yes	●	40	1200	1200	1200
Outdoor Care	2.0	-	yes	●	40	1200	1200	1200
Baby Care	4.0	●	yes	●	95	1400	1400	1200
Wool	2.0	-	yes	●	40	800	800	800
Hand Wash	2.0	-	yes	●	40	400	400	400

PROGRAM	Eco Bubble	Intensive	Soak	Easy Iron	Delay end	Quick Wash	Cycle time (min)
Cotton	●	●	●	●	●	●	109
Synthetics	●	●	●	●	●	-	82
Denim	●	●	●	●	●	-	69
Bedding	●	●	●	●	●	-	88
Dark Garment	●	●	-	●	●	-	75
Daily Wash	●	-	●	●	●	-	53
Eco Drum Clean	-	-	-	-	●	-	86
Super Eco Wash	●	●	-	●	●	-	93
Outdoor Care	●	-	-	-	●	-	79
Baby Care	●	●	●	●	●	-	132
Wool	●	-	-	-	●	-	60
Hand Wash	●	-	-	-	●	-	31

1. A cycle with a prewash takes approx. 19 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Cotton 60℃ + intensive + Eco bubble are programs according to EN60456.
4. Daily Wash : Short program for test institutes.
5. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
6. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WF0804Y8E-02842J_EN.indd 40 2011-5-24 16:08:11

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundery problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
95 95	Item may be washed at 95 ˚C	A	Can be dry cleaned using any solvent
60 60	Item may be washed at 60 ˚C	P	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
40 40	Item may be washed at 40 ˚C	F	Dry clean with aviation fuel, pure alcohol or R113 only
30 30	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
cl	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WF0804Y8E-02842J_EN.indd 41 2011-5-24 16:08:16

appendix

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
			W598mm X D600mm X H844mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			52 ℓ	
NET WEIGHT			WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
			69 kg	
WASH AND SPIN CAPACITY			8.0 kg	
POWER CONSUMPTION	MODEL		WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
	WASHING		220 V	150 W
			240 V	150 W
	WASH AND HEATING		220 V	2000 W
			240 V	2400 W
	SPIN	MODEL	WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
		230V	350 W	
	PUMPING		34 W	
PACKAGE WEIGHT	MODEL		WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
	PAPER		1.9 kg	
	PLASTIC		1.2 kg	
SPIN REVOLUTIONS	MODEL		WF0804W8/ WF0804Y8	WF0802W8/ WF0802Y8
	rpm		1400	1200

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WF0804Y8E-02842J_EN.indd 42 2011-5-24 16:08:16

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE		
DIMENSIONS			WF0802X8/WF0804X8/WF0806X8 WF0802Z8/WF0804Z8/WF0806Z8		
			W598mm X D600mm X H844mm		
WATER PRESSURE			50 kPa ~ 800 kPa		
WATER VOLUME			52 ℓ		
NET WEIGHT			WF0806X8/ WF0806Z8	WF0804X8/WF0802X8 WF0804Z8/WF0802Z8	
			72 kg	71 kg	
WASH AND SPIN CAPACITY			8.0 kg		
POWER CONSUMPTION	MODEL		WF0802X8/WF0804X8/WF0806X8 WF0802Z8/WF0804Z8/WF0806Z8		
	WASHING		220 V	150 W	
			240 V	150 W	
	WASH AND HEATING		220 V	2000 W	
			240 V	2400 W	
	SPIN	MODEL	WF0802X8/WF0804X8/WF0806X8 WF0802Z8/WF0804Z8/WF0806Z8		
		230V	350 W		
	PUMPING		34 W		
PACKAGE WEIGHT	MODEL		WF0802X8/WF0804X8/WF0806X8 WF0802Z8/WF0804Z8/WF0806Z8		
	PAPER		1.9 kg		
	PLASTIC		1.2 kg		
SPIN REVOLUTIONS	MODEL		WF0806X8/ WF0806Z8	WF0804X8/ WF0804Z8	WF0802X8/ WF0802Z8
	rpm		1600	1400	1200

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WF0804Y8E-02842J_EN.indd 43 2011-5-24 16:08:16

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Code No. DC68-02842J_EN

WF0802X8(E/N/S/V/W) WF0802W8(E/N/S/V/W)
WF0804X8(E/N/S/V/W) WF0804W8(E/N/S/V/W)
WF0806X8(E/N/S/V/W) WF0802Y8(E/N/S/V/W)
WF0802Z8(E/N/S/V/W) WF0804Y8(E/N/S/V/W)
WF0804Z8(E/N/S/V/W)
WF0806Z8(E/N/S/V/W)

מכונת כביסה

מדריך למשתמש

Planet First 100% Recycled Paper

מדריך זה מודפס על-גבי 100% נייר ממוחזר.

דמיין את האפשרויות

אנו מודים לך על רכישת מוצר זה של Samsung.
לקבלת שירות מקיף יותר, בצע רישום למוצר בכתובת

www.samsung.com/register

SAMSUNG

CE

WF0804Y8E-02842J_HB.indd 1 2011-5-24 16:16:02

מאפייני מכונת הכביסה החדשה של Samsung

מכונת הכביסה החדשה שלך תשנה את דרך החשיבה שלך לגבי כביסה. החל מהפונקציה הייחודית Eco Bubble ועד ליעילות בצריכת אנרגיה, מכונת הכביסה החדשה של Samsung כוללת את כל היתרונות שיהפכו את ביצוע הכביסה לקל ונעים ככל האפשר.

- **חיסכון באנרגיה**

  דגם זה מציע צריכת אנרגיה יעילה יותר בהשוואה למכשירי חשמל סטנדרטיים בדירוג A עם מערכת יוצר הבועות המיוחדת ועם מנוע שקט בטכנולוגיית Inverter (המרת זרם המסייעת לוויסות ההספק החשמלי).

- **כביסה בטכנולוגיית Eco Bubble**

  פונקציית Eco Bubble היעילה שפיתחה Samsung מספקת רמת ניקיון משופרת עם טיפול מתקדם בבדים. הודות ל-Eco Bubble חומרי הכביסה מתפזרים בצורה שווה וחודרים מהר יותר ועמוק יותר לסיבי הבד.

- **טכנולוגיית VRT PLUS™ (Vibration Reduction Technology, בדגמים נבחרים)**

  פעולת מכונת הכביסה של Samsung שקטה במיוחד הודות לצמצום של רמת הרעש והרעידות באמצעות חיישני רעידות תלת-ממדיים וטכנולוגיית בקרה חכמה, המאפשרת שמירה על רמת הרעידות הנמוכה ביותר האפשרית. כך, התוף שומר על איזון מושלם.

- **Quick Wash (כביסה מהירה)**

  אין זמן לבזבז! תוכנית הכביסה המהירה יכולה להקל על חייך העמוסים - עכשיו תוכל לכבס את הבגדים האהובים עליך (עד 2 ק"ג) ב-15 דקות!

- **מנוע שקט**

  המנוע השקט הייחודי של Samsung פועל ללא רצועות או גלגלי שיניים, מצמצם את רמת הרעידות והופך את מכונת הכביסה לשקטה יותר ועמידה יותר.

- **Eco Drum Clean (ניקוי תוף ידידותי לסביבה)**

  שימוש ב-Ecol Drum Clean (ניקוי תוף ידידותי לסביבה) מסייע לשמור על ניקיון מכונת הכביסה גם ללא כל חומר ניקוי או הלבנה כימי. שמור על תוף נקי ונטול ריחות עם תוכנית ניקוי ייחודית.

- **Baby Care (בגדי ילדים ותינוקות)**

  מכונת הכביסה של Samsung כוללת תוכניות שטיפה להגנה נוספת על בגדים של ילדים בעלי עור רגיש. תוכניות אלה מפחיתות את גירוי העור אצל ילדים על-ידי הפחתת השאריות של חומרי הכביסה. בנוסף, תוכניות אלה מסווגות את הכביסה למספר סוגים והשטיפה מתבצעת על-פי מאפייני סוג הכביסה, כך שבגדי ילדים יהיו נקיים ורעננים בכל לבישה.

- **מאושרת לכביסת צמר**

  המכונה נבדקה ועברה את ההסמכות הנדרשות מטעם חברת Woolmark Company עבור פריטי צמר הניתנים לכביסה במכונה. סימון זה מהווה אישור משודרג לעומת אישור Woolmark הקיים, המבטיח לא רק ביצועי כביסה גבוהים אלא גם טיפול בבדים עבור מוצרי צמר. יש לכבס בדים לפי ההוראות המוטבעות בתווית הבגד בהתאם למפורט על-ידי Woolmark ו-Samsung.

- **Hand Wash (כביסה ידנית)**

  ניתן להגדיר כביסה עדינה במיוחד על-ידי קביעת הטמפרטורה המתאימה, פעולת השטיפה העדינה וכמות המים המתאימה.

- **Delay End (השהיית סיום)**

  השהה סיום של מחזור כביסה לפרק זמן של עד 19 שעות במרווחים של שעה והגבר את נוחות השימוש במכונת הכביסה, במיוחד כשעליך לצאת מהבית.

WF0804Y8E-02842J_HB.indd 2 2011-5-24 16:16:02

- **נעילה בפני ילדים**

מנגנון הנעילה בפני ילדים מבטיח כי ידיים קטנות וסקרניות לא יבואו במגע עם מכונת הכביסה. מנגנון הבטיחות מונע מילדיך לשחק עם כפתורי ההפעלה של מכונת הכביסה ומתריע בפניך כאשר היא מופעלת.

- **תצוגה גרפית דיגיטלית**

לוח הבקרה של התצוגה הגרפית הדיגיטלית ברור וקל לשימוש, למניעת מאמץ וטרחה. התצוגה הגרפית הדיגיטלית קלה לתפעול, ועם זאת היא מאפשרת לך לבצע כוונונים מהירים ומדויקים בתהליך הכביסה לקבלת תוצאות מעולות.

- **דלת רחבה**

דלת רחבה במיוחד לצפייה נוחה בתכולה! הוסף והוצא כביסה בקלות, במיוחד פרטי כביסה גדולים כגון מצעים, מגבות ועוד.

מדריך זה כולל מידע חשוב לגבי התקנת מכונת הכביסה החדשה של Samsung, השימוש והטיפול בה. עיין בו לקבלת תיאור של לוח הבקרה, הוראות על אופן השימוש במכונת הכביסה ועצות להפקת המיטב מהתכונות ומהפונקציות המתקדמות שלה. בסעיף "פתרון בעיות וקודי מידע" בעמוד 37 תקרא מה עליך לעשות אם דבר מה משתבש במכונת הכביסה החדשה שלך.

WF0804Y8E-02842J_HB.indd 3 2011-5-24 16:16:03

מידע בטיחות

אנו מברכים אותך על רכישת מכונת הכביסה החדשה מבית Samsung. מדריך זה כולל מידע חשוב לגבי התקנת המכשיר, השימוש והטיפול בו. הקדש זמן לקריאת מדריך זה כדי לנצל בצורה הטובה ביותר את שפע התכונות והיתרונות של מכונת הכביסה שברשותך.

נושאי בטיחות שעליך להכיר

קרא מדריך זה ביסודיות כדי להבטיח שתדע כיצד להפעיל בבטחה וביעילות את הפונקציות והתכונות המקיפות של המכשיר החדש שרכשת, ושמור אותו במקום בטוח ליד המכשיר, לעיון בשעת הצורך. השתמש במכשיר זה רק למטרתו המיועדת בהתאם להוראות המפורטות במדריך זה.
התראות והנחיות בטיחות חשובות הכלולות במדריך זה אינן מכסות את כל התנאים והמצבים שעלולים להתרחש.
באחריותך להפעיל שיקול דעת, זהירות ותשומת לב במהלך ההתקנה, התחזוקה והתפעול של מכונת הכביסה.
מאחר שהנחיות התפעול הבאות חלות על מספר דגמים, מאפייני מכונת הכביסה שלך עשויים להיות שונים במקצת מאלה המתוארים במדריך זה וייתכן שלא כל סימני האזהרה יהיו ישימים. אם יש לך שאלות או ספקות, פנה אל מרכז השירות הקרוב אליך או חפש סיוע ומידע באופן מקוון בכתובת www.samsung.com.

סמלי בטיחות ואמצעי זהירות חשובים

פירוש הסמלים והסימנים המופיעים במדריך זה:

אזהרה	סכנות או אופני שימוש לא בטיחותיים שעלולים לגרום **פגיעה גופנית חמורה, מוות ו/או נזק לרכוש.**
זהירות	סכנות או אופני שימוש לא בטיחותיים שעלולים לגרום **פגיעה גופנית ו/או נזק לרכוש**.
זהירות	כדי להפחית את הסיכון לשריפה, פיצוץ, התחשמלות או פגיעה גופנית בעת השימוש במכונת הכביסה, פעל בהתאם לאמצעי הבטיחות הבסיסיים הבאים:

	אין לנסות.
	אין לפרק.
	אין לגעת.
	פעל בדיוק בהתאם להוראות.
	נתק את תקע החשמל מהשקע בקיר.
	ודא כי המכונה מוארקת כדי למנוע התחשמלות.
	פנה למרכז השירות לקבלת סיוע.
	הערה

סימני אזהרה אלה נועדו למנוע פגיעה בך ובאחרים.
יש לפעול לפיהם במדויק.
לאחר שתקרא פרק זה, שמור אותו במקום בטוח לעיון בשעת הצורך.

קרא את כל ההנחיות לפני השימוש במכשיר.

כמו בכל מכשיר הצורך חשמל ומכיל חלקים נעים, קיימות סכנות אפשריות. להפעלה בטוחה של המכשיר, עליך להכיר את אופן פעולתו ולנקוט אמצעי זהירות בעת השימוש בו.

WF0804Y8E-02842J_HB.indd 4 2011-5-24 16:16:05

אל תניח לילדים (או לחיות מחמד) לשחק על מכונת הכביסה או בתוכה. דלת מכונת הכביסה אינה נפתחת בקלות מבפנים וילדים עלולים להיפגע באופן חמור אם יילכדו בתוכה.

אזהרה

מכשיר זה אינו מיועד לשימוש של אנשים (וילדים) בעלי יכולות פיזיות, חושיות או שכליות מוגבלות, או חסרי נסיון וידע, אלא בפיקוח או בהנחיה לגבי אופן השימוש במכשיר של אדם אחר האחראי לבטיחותם.

יש לפקח על ילדים כדי לוודא שאינם משחקים עם המכשיר.

אם התקע (כבל ספק המתח) ניזוק, כדי למנוע סכנה יש להחליפו אצל היצרן, או סוכן שירות מטעמו, או אצל איש מקצוע מוסמך אחר.

יש למקם מכשיר זה כך שתקע החשמל, מיכלי המים וצינורות הניקוז יהיו נגישים.

במכונות כביסה עם פתחי אוורור בתחתית, יש לוודא כי הפתח אינו חסום על-ידי שטיח או מכשול אחר.

יש להשתמש בערכת הצינורות החדשה ואין לעשות שימוש חוזר בערכת הצינורות הישנה.

הוראות הנוגעות לסימון WEEE (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

השלכה נכונה של מוצר זה (פסולת של ציוד חשמלי ואלקטרוני)

(ניתן ליישום במדינות האיחוד האירופי ובמדינות אירופיות אחרות בעלות מערכות איסוף נפרדות)

סימון זה על-גבי המוצר, האביזרים או המסמכים המצורפים לו מציין כי אין להשליך מוצר זה ואביזרים חשמליים נלווים (כגון מטען, אוזניות, כבל USB) בתום השימוש יחד עם פסולת ביתית אחרת. כדי למנוע נזק אפשרי לסביבה או לבריאות בני האדם כתוצאה מהשלכת פסולת לא מבוקרת, הפרד פריטים אלה מסוגי פסולת אחרים ומחזר אותם באופן אחראי כדי לקדם את השימוש החוזר ובר הקיימא במשאבים חומריים.

משתמשים פרטיים מתבקשים לפנות לספק שממנו רכשו את המוצר, או למשרד הממשלתי המקומי, לקבלת פרטים על אופן השלכת המוצרים ויעד ההשלכה לצורך מחזור בטיחותי לסביבה.

משתמשים עסקיים מתבקשים לפנות לספק שלהם ולבדוק את התנאים וההתניות של חוזה הרכישה. אין להשליך מוצר זה ואביזרים הנלווים לו ביחד עם פסולת מסחרית אחרת.

WF0804Y8E-02842J_HB.indd 5 2011-5-24 16:16:05

מידע בטיחות

אזהרות חשובות במיוחד לשלב ההתקנה

אזהרה

התקנת מוצר זה תתבצע רק על-ידי טכנאי מוסמך או חברת שירות.
- התקנה בניגוד להנחיה זו עלולה לגרום להתחשמלות, שריפה, פיצוץ, בעיות במוצר או פגיעה גופנית.

המכשיר כבד, היזהר כאשר אתה מרים אותו

חבר את כבל החשמל לשקע בקיר הפועל במתח של 220-240 וולט AC / 50 הרץ ומעלה, והשתמש בשקע למכשיר זה בלבד. כמו כן, אל תשתמש בכבל מאריך.
- שימוש בשקע בקיר למספר מכשירים יחד באמצעות מפצל חשמל או על-ידי הארכת כבל החשמל עלול לגרום להתחשמלות או לשריפה.
- ודא כי מתח החשמל, התדר והזרם זהים לנתונים המצוינים במפרטי המוצר. אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה. חבר היטב את תקע החשמל לשקע בקיר.

הקפד להסיר בקביעות כל גוף זר כגון אבק או מים מהמגעים ומנקודות חיבור החשמל בעזרת מטלית יבשה.
- נתק את כבל החשמל ונקה אותו בעזרת מטלית יבשה.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

חבר את תקע החשמל לשקע בקיר בכיוון הנכון כך שהכבל ישתלשל כלפי הרצפה.
- אם תחבר את תקע החשמל לשקע בכיוון ההפוך, עלול להיגרם נזק לגידי החשמל בתוך הכבל והדבר עלול לגרום להתחשמלות או שריפה.

שמור את כל חומרי האריזה הרחק מהישג ידם של ילדים, מאחר שחומרים אלה עלולים לסכן אותם.
- אם ילד מניח שקית מעל ראשו, הדבר עלול לגרום לחנק.

אם נגרם נזק למכשיר, לתקע החשמל או לכבל החשמל, פנה למרכז השירות הקרוב.

על מכשיר זה להיות מוארק כהלכה.
אין להאריק את המכשיר לצינור גז, צינור מים מפלסטיק או קו טלפון.
- פעולה זו עלולה לגרום להתחשמלות, שריפה, פיצוץ או בעיות במוצר.
- לעולם אל תחבר את כבל החשמל לשקע שאינו מוארק כהלכה, כמו כן ודא כי ההארקה מבוצעת בהתאם לחוקי המדינה והתקנות המקומיות.

אל תתקין מכשיר זה בסמוך לגוף חימום או לחומר דליק.
אל תתקין מכשיר זה במיקום לח, שומני או מאובק, או במקום החשוף לאור שמש ישיר ולמים (גשם).

אל תתקין מכשיר זה במקום ששוררת בו טמפרטורה נמוכה
- כפור עלול לגרום לצינורות להתפוצץ.

אל תתקין מכשיר זה במיקום שבו עלולה להתרחש דליפת גז.
- הדבר עלול לגרום להתחשמלות או לשריפה.

אל תשתמש בשנאי חשמלי.
- הדבר עלול לגרום להתחשמלות או לשריפה.

אל תשתמש בתקע חשמל פגום, בכבל חשמל פגום או בשקע רופף בקיר.
- הדבר עלול לגרום להתחשמלות או לשריפה.

אל תמשוך או תכופף יתר על המידה את כבל החשמל.
אל תעקם או תקשור את כבל החשמל.
אל תתלה את כבל החשמל על חפץ ממתכת, אל תניח עליו חפץ כבד, אל תכניס את כבל החשמל בין עצמים ואל תדחוף את כבל החשמל לרווח שמאחורי המכשיר.
- הדבר עלול לגרום להתחשמלות או לשריפה.

אל תמשוך את כבל החשמל בעת ניתוק תקע החשמל מהקיר.
- נתק את תקע החשמל על-ידי אחיזה בתקע עצמו.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

אל תניח את כבל החשמל ואת הצינורות במקום שבו אתה עלול למעוד עליהם.

WF0804Y8E-02842J_HB.indd 6 2011-5-24 16:16:05

אמצעי זהירות לשלב ההתקנה

זהירות

- יש למקם את המכשיר כך שיהיה נגיש לתקע החשמל.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה עקב דליפת חשמל.

הצב את המכשיר על משטח ישר וקשיח שיכול לשאת את משקלו.

- אי ציות להנחיה זו עלול לגרום לרעידות חריגות, תזוזות, רעש, או בעיות במוצר.

אזהרות חשובות במיוחד לשלב השימוש

אזהרה

- אם מתרחשת הצפה במכשיר, נתק מייד את אספקת המים והחשמל ופנה אל מרכז השירות הקרוב.
- אל תיגע בתקע החשמל בידיים רטובות.
- אי ציות להנחיה זו עלול לגרום להתחשמלות.

אם בוקע מהמכשיר רעש מוזר, או אם עולה ממנו ריח של שריפה או עשן, נתק מייד את כבל החשמל ופנה אל מרכז השירות הקרוב.

- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

במקרה של דליפת גז (כגון גז פרופן, גז בישול, וכדומה), אוורר מייד את האזור מבלי לגעת בתקע החשמל. אל תיגע במכשיר או בכבל החשמל.

- אל תשתמש במאוורר חשמלי.
- ניצוץ חשמלי עלול לגרום לפיצוץ או לשריפה.

אל תניח לילדים לשחק על מכונת הכביסה או בתוכה. כמו כן, בעת השלכת המכשיר, הסר את ידית הדלת של מכונת הכביסה.

- אם ילד נלכד בתוך המכשיר, הוא עלול להיחנק למוות.

הקפד להסיר את חומרי האריזה (ספוג, קלקר) בבסיס המארז של מכונת הכביסה לפני השימוש בה.

WF0804Y8E-02842J_HB.indd 7 2011-5-24 16:16:05

מידע בטיחות

אל תכבס פריטים שהתלכלכו בנפט, קרוסין, בנזן, מדלל צבע, אלכוהול או חומרים דליקים או נפיצים אחרים.

- הדבר עלול לגרום להתחשמלות, לשריפה או לפיצוץ.

אל תנסה לפתוח בכוח את דלת מכונת הכביסה כאשר היא פועלת (שטיפה/ייבוש/סחיטה בטמפרטורה גבוהה).

- מים שזורמים החוצה ממכונת הכביסה עלולים לגרום לכוויות או לרצפה חלקה.

הדבר עלול לגרום לפגיעה גופנית.

- פתיחת הדלת בכוח עלולה לגרום נזק למוצר או פגיעה גופנית.

אל תכניס את ידך מתחת למכונת הכביסה.

- הדבר עלול לגרום לפגיעה גופנית.

אל תיגע בתקע החשמל בידיים רטובות.

- הדבר עלול להתחשמלות.

אל תכבה את המכשיר על-ידי ניתוק תקע החשמל בזמן שהמכשיר פועל.

- החזרת התקע לשקע בקיר עלולה לגרום לניצוץ ובעקבותיו להתחשמלות או לשריפה.

אל תניח לילדים או לאנשים שבריאותם לקויה להשתמש במכונת הכביסה ללא פיקוח. אל תניח לילדים לטפס על המכשיר.

- אי ציות להנחיה זו עלול לגרום להתחשמלות, לשריפה או לפגיעה גופנית.

אל תכניס יד או חפץ מתכתי מתחת למכונת הכביסה כאשר היא פועלת.

- הדבר עלול לגרום לפגיעה גופנית.

אל תנתק את המכשיר על-ידי משיכת כבל החשמל. הקפד תמיד לאחוז היטב בתקע ולמשוך אותו ישירות מהשקע.

- נזק לכבל עלול לגרום לקצר חשמלי, לשריפה ו/או להתחשמלות.

אל תנסה לנקות, לפרק או לשנות את המכשיר בעצמך.

- אל תשתמש באף נתיך (כגון נחושת, תיל פלדה וכו') מלבד הנתיך הסטנדרטי.
- לתיקון או התקנה מחדש של המכשיר, פנה אל מרכז השירות הקרוב.
- התקנה בניגוד להנחיה זו עלולה לגרום להתחשמלות, שריפה, בעיות במוצר או פגיעה גופנית.

אם החיבור של צינור אספקת המים לברז המים מתרופף ומים מציפים את המכשיר, נתק את תקע החשמל.

- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

נתק את תקע החשמל כאשר לא נעשה שימוש במכשיר למשך פרקי זמן ארוכים או במהלך סופת ברקים/רעמים.

- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

WF0804Y8E-02842J_HB.indd 8 2011-5-24 16:16:06

אזהרות אמצעי זהירות לשלב השימוש

אם חודר למכונת הכביסה גוף זר כגון חומר ניקוי, לכלוך, שאריות מזון וכדומה, נתק את תקע החשמל ונקה את מכונת הכביסה באמצעות מטלית רכה ולחה.

- אי ציות להנחיה זו עלול לגרום לשינוי צבע, עיוות צורה, נזק או חלודה.

מכה חזקה עלולה לשבור את הזכוכית הקדמית. היזהר בעת השימוש במכונת הכביסה.

- זכוכית שנשברה עלולה לגרום לפגיעה גופנית.

לאחר כשל באספקת המים או בעת חיבור מחדש של צינור אספקת המים, פתח את ברז המים בזהירות. פתח את ברז המים בזהירות לאחר תקופה ארוכה שבה לא נעשה שימוש במכשיר.

- לחץ האוויר בצינור אספקת המים או בצינור המים עלול לגרום נזק לרכיבים או לנזילת מים.

אם מתרחשת שגיאת ניקוז במהלך ההפעלה, בדוק אם קיימת בעיה בניקוז.

- אם נעשה שימוש במכשיר כאשר יש בו הצפה עקב בעיית ניקוז, הדבר עלול לגרום להתחשמלות או לשריפה עקב דליפת חשמל.

הכנס את הכביסה לתוך המכונה כך שהכבסים לא ייתפסו בדלת.

- אם כבסים נתפסים בדלת, הדבר עלול לגרום נזק לכבסים או למכונת הכביסה, או לגרום לנזילת מים.

ודא שברז המים סגור כשלא נעשה שימוש במכונת הכביסה.

- ודא שהבורג על המחבר של צינור אספקת המים מוברג היטב.
- אי ציות להנחיה זו עלול לגרום לנזק למוצר או לפגיעה גופנית.

בדוק אם חומרים זרים (כגון לכלוך, חוטים וכו') לא לכלכו את אטם הגומי.

- אם הדלת אינה סגורה היטב, עלולה להתרחש נזילת מים.

לפני השימוש במוצר, פתח את ברז המים ובדוק שהמחבר של צינור אספקת המים מהודק היטב ושאין נזילת מים.

- אם הברגים או המחבר של צינור אספקת המים רופפים, הדבר עלול לגרום לנזילת מים.

WF0804Y8E-02842J_HB.indd 9 2011-5-24 16:16:06

מידע בטיחות

אל תעמוד על-גבי המכשיר ואל תניח חפצים (כגון כביסה, נרות דולקים, סיגריות דולקות, כלי שולחן, כימיקלים, חפצים מתכתיים וכו') על-גבי המכשיר.
- פעולה זו עלולה לגרום להתחשמלות, לשריפה, לבעיות במוצר, או לפגיעה גופנית.

אל תרסס חומר נדיף כגון מדביר חרקים על פני שטח המכשיר.
- מלבד העובדה שהוא מזיק לבני אדם, הוא עלול לגרום גם להתחשמלות, לשריפה, או לבעיות במוצר.

אל תניח חפץ שיוצר שדה אלקטרומגנטי בקרבת מכונת הכביסה.
- הדבר עלול לגרום לפגיעה גופנית בשל פעולה לא תקינה.

מאחר שהמים המתנקזים במהלך מחזור כביסה או ייבוש בטמפרטורה גבוהה הם חמים, אין לגעת במים.
- הדבר עלול לגרום לכוויות או לפציעה.

אין לשטוף, לסחוט או לייבש מושבים, מרבדים או בגדים עמידים במים (*) אלא אם המכשיר כולל תוכנית מיוחדת לשטיפת פריטים מסוג זה.
- אין לכבס מרבדים עבים וקשים אפילו אם על תווית הוראות הכביסה מופיע סימן של כביסה במכונה.
- הדבר עלול לגרום לפגיעה גופנית או לנזק למכונת הכביסה, לקירות, לרצפה או לכבסים בשל רעידות חריגות.

* מצעים מצמר, כיסויי גשם, שכפ"צים, מכנסי גלישה, שקי שינה, מגן פלסטיק לחיתולים, חליפות טריינינג וכיסויים לאופניים, אופנועים, כלי רכב וכו'.

אל תפעיל את מכונת הכביסה כאשר מגירת חומרי הכביסה אינה בתוכה.
- הדבר עלול לגרום להתחשמלות או לפגיעה גופנית בשל נזילת מים.

אל תיגע בדפנות הפנימיים של התוף במהלך הייבוש או מייד בסיומו, מאחר שהן חמות.
- הדבר עלול לגרום לכוויות.

אל תכניס את ידך למגירת חומרי הכביסה לאחר פתיחתה.
- הדבר עלול לגרום לפגיעה גופנית משום שידך עלולה להיתפס בהתקן ההזנה של חומרי הכביסה.

אל תניח חפץ כלשהו מלבד כביסה (כגון נעליים, שאריות מזון, חיות) בתוך מכונת הכביסה.
- הדבר עלול לגרום לנזק למכונת הכביסה, או לפגיעה גופנית ולמוות במקרה של חיות מחמד עקב הרעידות החריגות.

אל תלחץ על הכפתורים באמצעות חפצים חדים כגון סיכות, סכינים, ציפורניים וכדומה.
- הדבר עלול לגרום להתחשמלות או לפגיעה גופנית.

אל תכבס כביסה המוכתמת בשמנים, קרמים או משחות שנמכרים בדרך כלל במכוני קוסמטיקה או עיסוי.
- הדבר עלול לגרום לעיוות של אטם הגומי ולנזילת מים.

אל תשאיר חפצים מתכתיים כגון סיכת ביטחון או סיכת ראש, או חומר מלבין בתוף המכונה למשך פרקי זמן ארוכים.
- הדבר עלול לגרום לתוף להחליד.
- אם סימני חלודה מתחילים להופיע על משטח התוף, שפוך עליו תכשיר ניקוי (נייטרלי) והשתמש בספוג לניקוי. לעולם אל תשתמש במברשת ברזל.

אין להשתמש ישירות בתכשיר לניקוי יבש ואין לכבס, לשטוף או לסחוט כביסה שעליה שאריות של תכשיר לניקוי יבש.
- הדבר עלול לגרום לבעירה ספונטנית או להתלקחות בשל החום הנפלט כתוצאה מתהליך החמצון של השמן.

אל תשתמש במים חמים מהתקנים לקירור/חימום מים.
- הדבר עלול לגרום לבעיות במכונת הכביסה.

WF0804Y8E-02842J_HB.indd 10 2011-5-24 16:16:06

אל תשתמש בסבון טבעי לכביסה ביד במכונת הכביסה.
- אם הוא יתקשה ויצטבר בתוך מכונת הכביסה, הוא עלול לגרום לבעיות במוצר, לשינוי צבע, לחלודה או לריח רע.

אל תכבס פרטי כביסה גדולים כגון מצעים ברשת הכביסה.
- הכנס גרביים וחזיות לרשת הכביסה וכבס אותם עם שאר פרטי הכביסה.
- אי ציות להנחיה זו עלול לגרום לפגיעה גופנית בשל רעידות חריגות.

אל תשתמש בחומרי כביסה שמתקשים.
- אם הם יצטברו בתוך מכונת הכביסה, עלולה להתרחש נזילת מים.

במכונות כביסה עם פתחי אוורור בתחתית, יש לוודא כי הפתח אינו חסום על-ידי שטיח או מכשול אחר.

הקפד לרוקן את הכיסים בכל הבגדים המיועדים לכביסה.
- חפצים קשים וחדים כגון מטבעות, סיכות ביטחון, מסמרים, ברגים או אבנים עלולים לגרום למכשיר נזק משמעותי.

אל תכבס בגדים בעלי אבזמים וכפתורים גדולים, או אביזרי מתכת כבדים אחרים.

אזהרה אזהרות חשובות במיוחד לשלב הניקוי

אל תנקה את המכשיר על-ידי התזת מים ישירות עליו.
אל תשתמש בבנזן, מדלל או אלכוהול לניקוי המכשיר.
- הדבר עלול לגרום לשינוי צבע, עיוות צורה, נזק, התחשמלות או שריפה.

לפני ניקוי או פעולת תחזוקה, נתק את המכשיר מהשקע בקיר.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

WF0804Y8E-02842J_HB.indd 11 2011-5-24 16:16:06

תוכן העניינים

התקנת מכונת הכביסה 13

13 בדיקת חלקי המכונה
14 עמידה בדרישות ההתקנה
14 אספקת חשמל והארקה
14 אספקת מים
15 ניקוז
15 הצבה על רצפה
15 טמפרטורת הסביבה
15 התקנה בחדרון או בארון
15 התקנת מכונת הכביסה

כביסה במכונה 21

21 ביצוע כביסה בפעם הראשונה
21 הוראות בסיסיות
22 שימוש בלוח הבקרה
25 נעילה בפני ילדים
25 שקט
26 Delay end (השהיית סיום)
26 My Cycle (התוכנית שלי)
27 Eco Bubble
28 ביצוע כביסה באמצעות בורר התוכניות
29 ביצוע כביסה באופן ידני
29 הנחיות לכביסה
30 מידע על חומרי כביסה ותוספים
30 בחירת חומר הכביסה לשימוש
31 מגירת חומרי הכביסה
31 נוזל כביסה (בדגמים נבחרים)

ניקוי ותחזוקה של מכונת הכביסה 32

32 Eco Drum Clean (ניקוי תוף ידידותי לסביבה)
33 ניקוז מכונת הכביסה במקרה חירום
34 ניקוי מסנן הפסולת
34 ניקוי החלק החיצוני
35 ניקוי מגירת חומרי הכביסה ומסילות המגירה
35 ניקוי מסנן הרשת של צינור המים
36 תיקון מכונת כביסה שקפאה
36 אחסון מכונת הכביסה

פתרון בעיות וקודי מידע 37

37 עיין בהצעות הבאות אם מכונת הכביסה שלך...
38 קודי מידע

טבלת תוכניות הכביסה 39

39 טבלת תוכניות הכביסה
(דגמים רגילים : סדרות WF08y / **w**)**
40 טבלת תוכניות הכביסה
(דגמי VRT: סדרות WF08Z / **X**)**

נספחים 41

41 טבלת טיפול בבדים
41 שמירה על הסביבה
41 הצהרת תאימות
42 מפרטים

WF0804Y8E-02842J_HB.indd 12 2011-5-24 16:16:06

התקנת מכונת הכביסה

ודא כי הטכנאי שמתקין את המכונה ממלא בדייקנות אחר הוראות אלה כדי שמכונת הכביסה החדשה שלך תפעל כהלכה וכדי שתוכל לבצע את פעולת הכביסה ללא סיכון לפגיעה גופנית.

בדיקת חלקי המכונה

הוצא בזהירות את מכונת הכביסה מאריזתה וודא שקיבלת את כל החלקים המוצגים להלן. אם מכונת הכביסה ניזוקה בזמן ההובלה, או אם חלק כלשהו חסר, פנה לשירות הלקוחות של Samsung או למשווק Samsung באזורך.

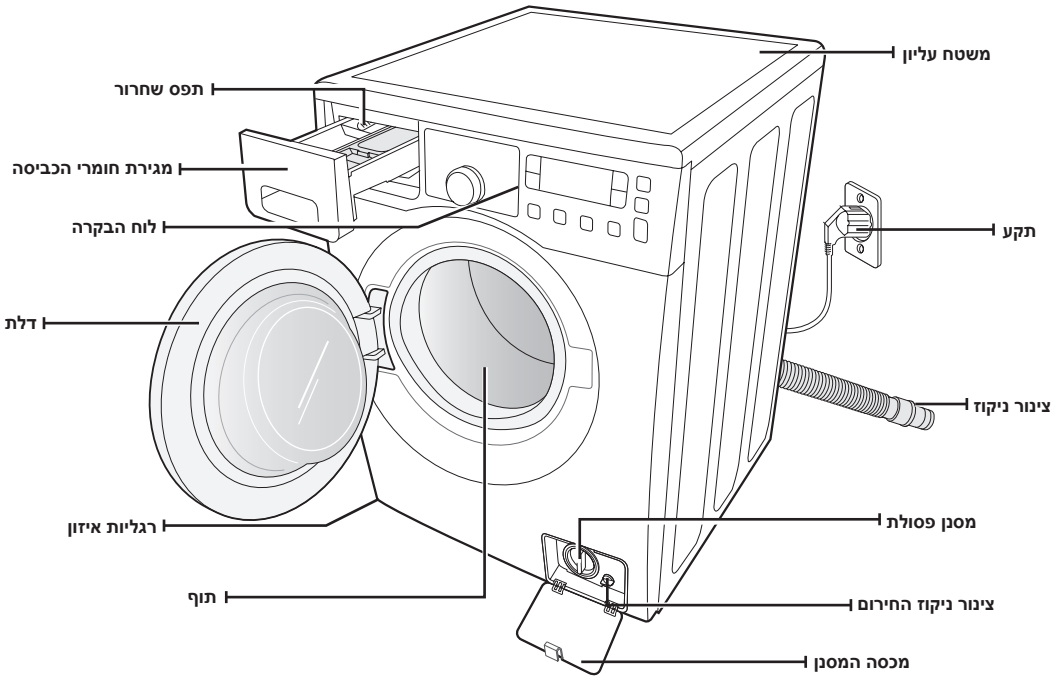

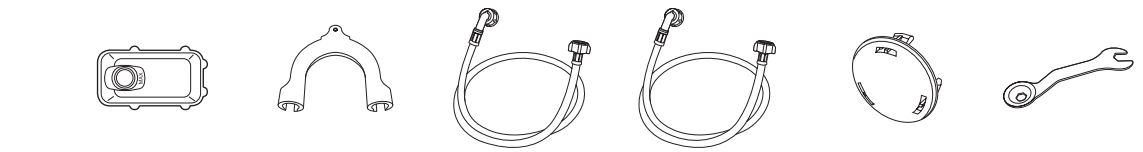

מפתח ברגים	* מכסים לחורי הברגים	צינור אספקת מים קרים	צינור אספקת מים חמים (בדגמים נבחרים)	מוביל הצינור	תיבת נוזל הכביסה (בדגמים נבחרים)
		צינור אספקת המים			

*** מכסים לחורי הברגים**: מספר המכסים לחורי הברגים משתנה בהתאם לדגם (5~3 מכסים).

WF0804Y8E-02842J_HB.indd 13 2011-5-24 16:16:08

התקנת מכונת הכביסה

עמידה בדרישות ההתקנה

אספקת חשמל והארקה

אזהרה
לעולם אל תשתמש בכבל מאריך.
השתמש רק בכבל החשמל המצורף למכונת הכביסה.

לקראת ההתקנה, ודא כי אספקת החשמל שברשותך כוללת:
- נתיך או מפסק פחת של 220-240 וולט AC / 50 הרץ
- מעגל חשמלי נפרד המשרת את מכונת הכביסה בלבד

מכונת הכביסה חייבת להיות מוארקת. במקרה של תקלה או קלקול במכונת הכביסה, הארקה מפחיתה את סכנת ההתחשמלות, על-ידי אספקת נתיב של התנגדות נמוכה יותר לזרם החשמל.
מכונת הכביסה מסופקת עם כבל חשמל בעל תקע הארקה של שלושה פינים לשימוש בשקע מוארק ומותקן כהלכה.

לעולם אל תחבר את חוט ההארקה לקווי צנרת פלסטיק, לצנרת גז או לצינורות מים חמים.

חיבור לא תקין של המוליך להארקת הציוד עלול לגרום להתחשמלות.
אם אינך בטוח אם מכונת הכביסה מוארקת כהלכה, התייעץ עם חשמלאי או עם איש שירות מוסמך. אל תשנה את התקע המצורף למכונת הכביסה. אם הוא אינו תואם לשקע, בקש מחשמלאי מוסמך להתקין במקומו שקע מתאים.

אספקת מים

מכונת הכביסה מתמלאת כהלכה כאשר לחץ המים הוא 50 kPa ~ 800 kPa. לחץ מים קטן מ-50 kPa עלול לגרום לכך ששסתום המים לא ייסגר באופן הרמטי, ובכך עלול לגרום לכשל בפעולתו. לחלופין, ייתכן שהזמן שיידרש למילוי מכונת הכביסה יהיה ארוך מכפי שמתירים הבקרים, דבר שיוביל לכיבוי מכונת הכביסה. (הבקרים כוללים מנגנון מובנה של מגבלת זמן מילוי, שתוכננה למנוע גלישות/הצפות אם מתרופף צינור פנימי.)

ברזי המים חייבים להימצא בטווח של 120 ס"מ מגב המכונה כדי שצינורות כניסת המים המצורפים יגיעו למכונת הכביסה.

רוב החנויות לציוד שרברבות מוכרות צינורות כניסת מים באורכים שונים של עד 305 ס"מ.

ניתן להקטין את הסיכון לנזילות ולנזקי מים באמצעות:
- התקנת ברזי המים באופן המאפשר גישה קלה.
- סגירת הברזים כאשר מכונת הכביסה אינה בשימוש.
- בדיקה תקופתית לאיתור נזילות במתאמים של צינורות כניסת המים.

אזהרה
לפני השימוש הראשון במכונת הכביסה, ודא שאין דליפות בכל החיבורים של שסתום המים ובברזים.

WF0804Y8E-02842J_HB.indd 14 2011-5-24 16:16:08

ניקוז

Samsung ממליצה על צינור אנכי בגובה 65 ס"מ. על צינור הניקוז להיות מנותב לצינור האנכי דרך תפס צינור הניקוז. על הצינור האנכי להיות גדול מספיק כדי להכיל את הקוטר החיצוני של צינור הניקוז. צינור הניקוז מורכב במפעל.

הצבה על רצפה

לקבלת ביצועים מיטביים, יש להתקין את מכונת הכביסה על רצפה יציבה. ייתכן שיהיה צורך לחזק רצפות עץ כדי למזער רעידות ו/או משקל לא מאוזן. שטיחים או משטחים רכים מגבירים את הרעידות ואת הנטייה של מכונת הכביסה לזוז מעט במהלך מחזור הסחיטה.

לעולם אל תתקין את מכונת הכביסה על במה או על מבנה רעוע.

טמפרטורת הסביבה

אל תתקין את מכונת הכביסה במקומות שבהם מים עלולים לקפוא, מאחר שתמיד נמצאים מים בשסתום המים, במשאבה ובאזורי הצינורות של מכונת הכביסה. מים קפואים בצינורות עלולים לגרום נזק לרצועות, למשאבה ולחלקים אחרים.

התקנה בחדרון או בארון

לפעולה בטוחה ותקינה, יש להתקין את מכונת הכביסה תוך שמירה על מרווחים של לפחות:

25 מ"מ – בצדדים	50 מ"מ – מאחור
25 מ"מ – למעלה	465 מ"מ – בחזית

אם מכונת כביסה ומייבש מותקנים יחד, יש לשמור על מעבר אוויר ללא חסימה של לפחות 465 מ"מ בקדמת החדרון או הארון. למכונת הכביסה לבדה לא דרוש מעבר אוויר כלשהו.

התקנת מכונת הכביסה

שלב 1
בחירת מיקום

לפני שתתקין את מכונת הכביסה, ודא כי במיקום שבחרת:

- יש משטח ישר וקשיח ללא שטיחים או מצע אחר שעלול לחסום את האוורור
- אין חשיפה לאור שמש ישיר
- יש אוורור הולם
- הטמפרטורה אינה צונחת מתחת לנקודת הקיפאון (מתחת ל-C° 0)
- אין מקורות חום קרובים כגון גופי חימום המופעלים באמצעות נפט או גז
- יש די מקום פנוי כך שמכונת הכביסה לא תעמוד על כבל החשמל שלה

WF0804Y8E-02842J_HB.indd 15 2011-5-24 16:16:08

התקנת מכונת הכביסה

שלב 2
הסרת בורגי ההובלה

לפני התקנת מכונת הכביסה, עליך להסיר את כל בורגי ההובלה מגב היחידה.

1. שחרר את כל הברגים באמצעות מפתח הברגים המצורף.

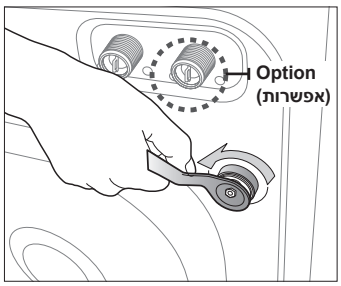

2. אחוז בבורג באמצעות מפתח הברגים ומשוך אותו החוצה דרך החלק הרחב של החור. חזור על פעולה זו עבור כל בורג.

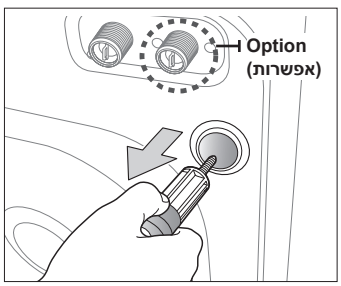

3. כסה את החורים במכסי הפלסטיק המצורפים.

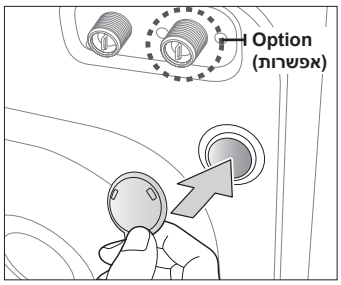

4. אחסן את בורגי ההובלה במקום בטוח למקרה שתצטרך להוביל שוב את מכונת הכביסה.

⚠ אזהרה חומרי אריזה יכולים להוות סיכון לילדים; שמור את כל חומרי האריזה (שקיות פלסטיק, קלקר וכדומה) הרחק מהישג ידם של ילדים.

WF0804Y8E-02842J_HB.indd 16 2011-5-24 16:16:09

שלב 3
כוונון רגליות האיזון

בעת התקנת מכונת הכביסה, ודא כי תקע החשמל, אספקת המים והניקוז נגישים בקלות.

1. החלק את מכונת הכביסה למקומה.
2. אזן את מכונת הכביסה על-ידי סיבוב רגליות האיזון פנימה והחוצה כנדרש באופן ידני.

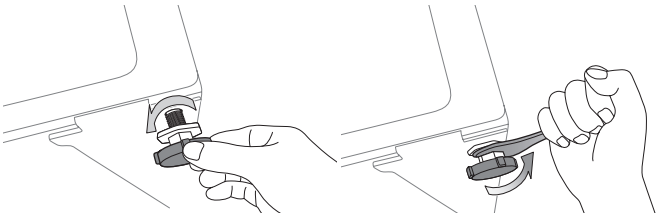

3. כשמכונת הכביסה מאוזנת, הדק את האומים באמצעות מפתח הברגים המצורף למכונת הכביסה.

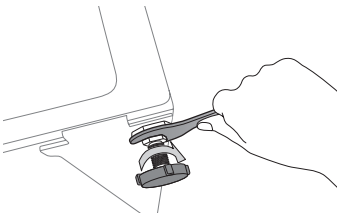

שלב 4
חיבור המים והניקוז

חיבור צינור אספקת המים

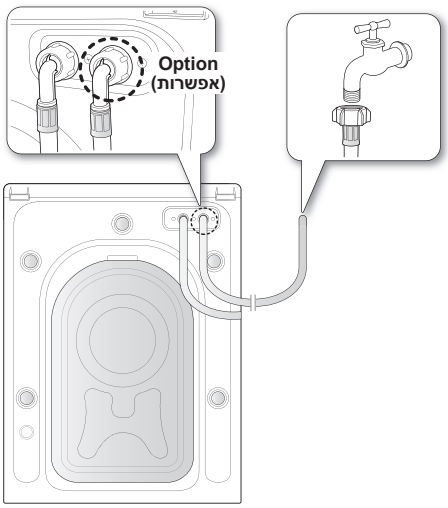

1. קח את המתאם בצורת L של צינור אספקת המים הקרים וחבר אותו לפתח כניסת אספקת המים הקרים בגב המכונה. הדק אותו באופן ידני.

   על צינור אספקת המים להיות מחובר למכונת הכביסה בקצה אחד ולברז המים בקצה האחר. אל תמתח את צינור אספקת המים. אם הצינור קצר מדי, החלף אותו בצינור ארוך יותר התומך בלחץ גבוה.

2. חבר את הקצה השני של צינור אספקת המים הקרים לברז המים הקרים בכיור והדק אותו באופן ידני. אם יש צורך, ניתן למקם מחדש את צינור אספקת המים בקצה של מכונת הכביסה על-ידי שחרור הברגת המתאם, סיבוב הצינור והידוק מחדש של המתאם.

בדגמים נבחרים עם פתח כניסה נוסף למים חמים:

1. קח את המתאם האדום בצורת L של צינור אספקת המים החמים וחבר אותו לפתח כניסת אספקת המים החמים בגב המכונה. הדק אותו באופן ידני.
2. חבר את הקצה השני של צינור אספקת המים החמים לברז המים החמים בכיור והדק אותו באופן ידני.
3. השתמש במחבר Y אם ברצונך להשתמש במים קרים בלבד.

WF0804Y8E-02842J_HB.indd 17 2011-5-24 16:16:11

התקנת מכונת הכביסה

חיבור צינור אספקת המים

1. הסר את המתאם מצינור אספקת המים.

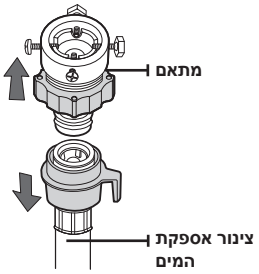

2. בשלב ראשון, שחרר באמצעות מברג צלב (פיליפס) את ארבעת הברגים שעל המתאם. לאחר מכן, קח את המתאם וסובב את חלק (2) בכיוון החץ עד לפער של 5 מ"מ.

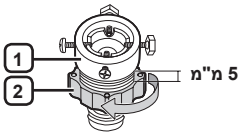

3. חבר את המתאם לברז המים על-ידי הידוק הברגים בחוזקה תוך הרמת המתאם כלפי מעלה.
סובב את חלק (2) בכיוון החץ וחבר את (1) ו-(2).

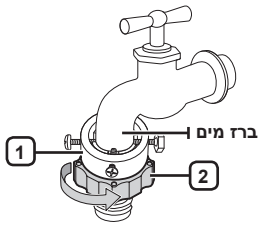

4. חבר את צינור אספקת המים למתאם. כשתשחרר את חלק (3), הצינור יתחבר למתאם באופן אוטומטי וישמיע צליל נקישה.

לאחר שחיברת את צינור אספקת המים למתאם, ודא כי הוא מחובר כהלכה על-ידי משיכת צינור אספקת המים כלפי מטה.

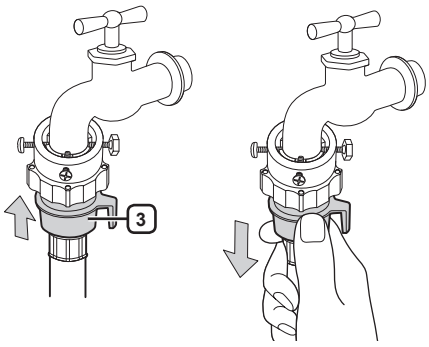

5. חבר את הקצה השני של צינור אספקת המים לשסתום של פתח כניסת המים בחלקה האחורי של מכונת הכביסה. הברג את הצינור בכיוון השעון עד הסוף.

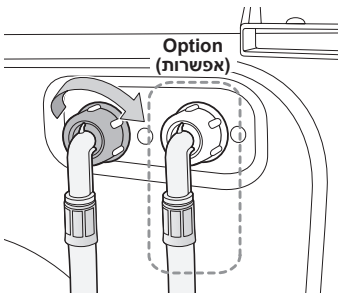

WF0804Y8E-02842J_HB.indd 18 2011-5-24 16:16:12

6. פתח את זרם המים וודא שאין נזילת מים דרך שסתום המים, הברז או המתאם. אם הבחנת בנזילת מים, חזור על השלבים הקודמים.

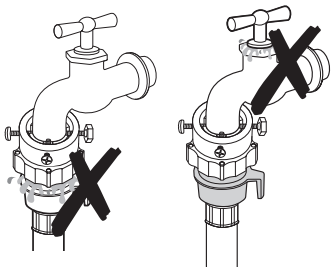

אזהרה
אין להשתמש במכונת הכביסה אם יש נזילת מים. הדבר עלול לגרום להתחשמלות או לפגיעה גופנית.

- אם לברז המים יש קצה מתברג, חבר את צינור אספקת המים לברז כמוצג באיור.

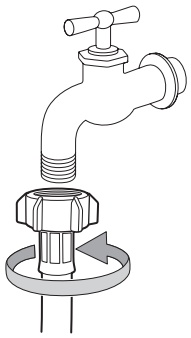

השתמש בסוג הברז הנפוץ ביותר לאספקת המים. אם הברז מרובע או גדול מדי, הסר את הטבעת המרווחת לפני הכנסת הברז למתאם.

חיבור צינור ספיגת המים (בדגמים נבחרים)

צינור ספיגת המים תוכנן להגנה מושלמת מפני נזילות.
הוא מחובר לצינור אספקת המים ומנתק באופן אוטומטי את זרם המים במקרה של נזק לצינור. כמו כן, הוא מציג חיווי אזהרה.

- חבר את צינור אספקת המים לברז כמוצג באיור.

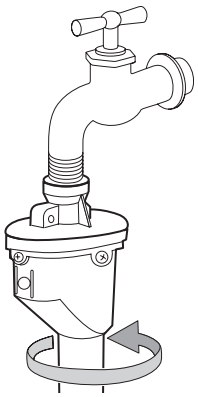

WF0804Y8E-02842J_HB.indd 19 2011-5-24 16:16:13

התקנת מכונת הכביסה

חיבור צינור הניקוז

ניתן למקם את קצה צינור הניקוז בשלושה אופנים:

1. **מעל דופן כיור רחצה:** יש להניח את צינור הניקוז בגובה של בין 60 ל-90 ס"מ. כדי לשמור על פיה מעוקלת של צינור הניקוז, השתמש במוביל הצינור מפלסטיק המצורף למכונה. חזק את המוביל אל הקיר בעזרת וו או אל הברז בעזרת פיסת חוט כדי למנוע תזוזה של צינור הניקוז.

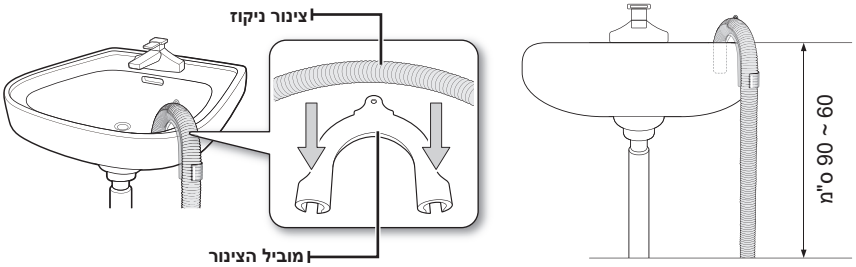

2. במסעף צינור הניקוז בכיור: על מסעף צינור הניקוז להיות מעל סיפון הכיור, כך שקצה הצינור יימצא לפחות 60 ס"מ מעל הרצפה.
3. בצינור ניקוז: אנו ממליצים על שימוש בצינור אנכי בגובה 65 ס"מ; על אורך הצינור להיות בין 60 ל-90 ס"מ.

דרישות צינור הניקוז האנכי:
- קוטר מינימלי של 5 ס"מ.
- ספיקה מינימלית של 60 ליטרים לדקה.

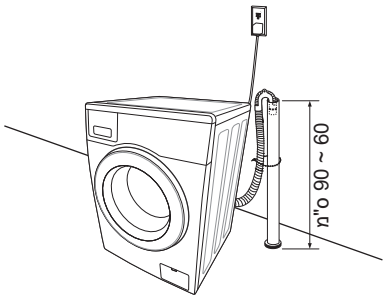

שלב 5
הפעלת מכונת הכביסה

חבר את כבל החשמל לשקע חשמל מאושר של 220-240 וולט AC / 50 הרץ בקיר, המוגן על-ידי נתיך או מפסק פחת. (לקבלת מידע נוסף על דרישות חשמל והארקה, ראה עמוד 14.)

WF0804Y8E-02842J_HB.indd 20 2011-5-24 16:16:15

כביסה במכונה

עם מכונת הכביסה החדשה של Samsung, הקושי העיקרי שתיתקל בו בפעולת הכביסה יהיה להחליט מה לכבס קודם.

ביצוע כביסה בפעם הראשונה

לפני ביצוע כביסה בפעם הראשונה, עליך להריץ מחזור שלם של מכונה ריקה (ללא כביסה).

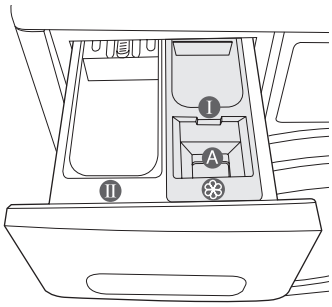

1. לחץ על כפתור **Power** (הפעלה).
2. הוסף מעט אבקת כביסה לתא אבקת הכביסה Ⅱ במגירת חומרי הכביסה.
3. פתח את ברז אספקת המים למכונת הכביסה.
4. לחץ על כפתור **Start/Pause** (התחל/השהה).

פעולה זו תנקז שאריות מים שעלולות להימצא במכונה עקב בדיקת ההרצה של היצרן.

תא Ⅰ: חומר כביסה לשטיפה מקדימה, או עמילן.
תא Ⅱ: אבקת כביסה לשטיפה העיקרית, מרכך מים, חומר להשרייה מוקדמת, חומרי הלבנה והסרת כתמים.

לכביסה באמצעות נוזל כביסה, השתמש בתיבת נוזל הכביסה (עיין בעמוד 31 במדריך לאיתור הדגם המתאים). אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.

תא ❀: חומרים נוספים, כגון מרכך כביסה או סבון (אין למלא מעל הקצה התחתון (MAX) של "A").

הוראות בסיסיות

1. הכנס את הכביסה למכונה.

אזהרה אל תעמיס את המכונה יתר על המידה. לבדיקת הקיבולת המתאימה עבור כל סוג כביסה, עיין בטבלה בעמוד 30.

- ודא שהכבסים לא נתפסים בדלת, משום שהדבר עלול לגרום לנזילת מים.
- ייתכן שבתום מחזור הכביסה, יישארו שאריות של חומר הכביסה באזור פס הגומי בחלק הקדמי של המכונה. סלק את שאריות חומר הכביסה, משום שהן עלולות לגרום לנזילת מים.
- אל תיגע בזכוכית הדלת הקדמית כאשר מכונת הכביסה פועלת, שכן היא עלולה להיות חמה.
- אל תפתח את מגירת חומרי הכביסה או את מסנן הפסולת כאשר מכונת הכביסה פועלת, שכן אתה עלול לבוא במגע עם מים חמים או קיטור.
- אל תכבס פריטים עמידים במים בתוכנית כביסה רגילה, רק בתוכנית Outdoor Care (בגדי טיול ועבודה).

2. סגור את הדלת באופן הרמטי.
3. לחץ על לחצן Power (הפעלה).
4. הוסף אבקת כביסה וחומרים נוספים למגירת ההזנה.
5. בחר את התוכנית ואת אפשרויות הכביסה המתאימות.
   נורית חיווי הכביסה תאיר ומשך מחזור הכביסה המשוער יופיע על-גבי התצוגה.
6. לחץ על כפתור **Start/Pause** (התחל/השהה).

WF0804Y8E-02842J_HB.indd 21 2011-5-24 16:16:16

כביסה במכונה

שימוש בלוח הבקרה

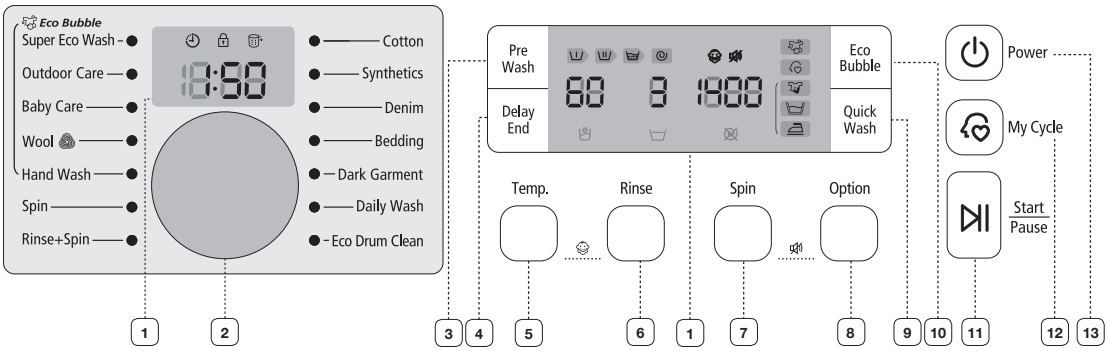

1 תצוגה גרפית דיגיטלית	מציגה את הזמן הנותר לסיום מחזור הכביסה, את כל פרטי תוכנית הכביסה והודעות שגיאה.
2 בורר התוכניות	בחר את סוג הכביסה ואת מהירות הסחיטה בתוכנית. לקבלת מידע מפורט, עיין בסעיף "ביצוע כביסה באמצעות בורר התוכניות". (ראה עמוד 28) **Cotton** (כותנה) - לפריטי כותנה בדרגת לכלוך בינונית או מועטה, מצעים, מפות שולחן, לבנים, מגבות, חולצות וכדומה. **Synthetics** (סינטטי) - לחולצות, גופיות ופריטים אחרים העשויים פוליאסטר (דיולן, טרווירה), פוליאמיד (פרלון, ניילון) או תערובות סינטטיות דומות, בדרגת לכלוך בינונית או מועטה. **Denim** (אריג גס) - מפלס מים גבוה יותר בשלב השטיפה העיקרית ושטיפות נוספות מבטיחים סילוק של כל שאריות אבקת הכביסה מהבגדים. **Bedding** (מצעים) - לכיסויי מיטה, סדינים, ציפות וכדומה. כדי להשיג את התוצאות הטובות ביותר, אל תכבס יותר מ-2 ק"ג ו/או יותר מסוג אחד של מצעים. **Dark Garment** (בגדים כהים) - שטיפות נוספות ומהירות סחיטה פחותה מבטיחות כי הבגדים הכהים האהובים עליך יעברו כביסה עדינה ושטיפה יסודית. **Daily Wash** (כביסה רגילה) - כביסה לפריטים יומיומיים כגון לבנים וחולצות. **Eco Drum Clean** (ניקוי תוף ידידותי לסביבה) - תוכנית לניקוי התוף. כוללת הסרת לכלוך וחיידקים מהתוף. מומלץ להשתמש בקביעות (לאחר כל 40 כביסות). אין צורך בחומר ניקוי או הלבנה. **Super Eco Wash** (כביסה חסכונית במיוחד) - פונקציית Eco Bubble בטמפרטורה נמוכה מבטיחה כי תקבל תוצאות כביסה מושלמות תוך חיסכון ויעילות בצריכת אנרגיה. **Outdoor Care** (בגדי טיול ועבודה) - כביסה לביגוד שטח כגון בגדי טיפוס, חליפות סקי וביגוד ספורטיבי. מיועד לבדים עם גימור בטכנולוגיה פונקציונלית וסיבים סינטטיים כגון ספנדקס, סיבים נמתחים ומיקרופייבר. **Baby Care** (בגדי ילדים ותינוקות) - כביסה בטמפרטורה גבוהה ושטיפות נוספות מבטיחות סילוק של כל שאריות אבקת הכביסה מהבגדים. **Wool** (צמר) - רק עבור פריטי צמר הניתנים לכביסה במכונה. משקל הכבסים לא יעלה על 2 ק"ג. • בתוכנית הצמר פעולת הכביסה מבוצעת באמצעות תנועות ערסול עדינות. במהלך השטיפה, תנועות הערסול וההשרייה העדינות נמשכות כדי להגן על סיבי הצמר מפני התכווצות / עיוות צורה ולניקוי עדין במיוחד. ניתן בקלות לעצור את הפעולה בתוכנית זו.

WF0804Y8E-02842J_HB.indd 22 2011-5-24 16:16:16

	• בתוכנית הצמר מומלץ להשתמש באבקת כביסה עדינה, לתוצאות כביסה משופרות ולשמירה טובה יותר על סיבי הצמר. תוכנית כביסת הצמר במכונה זו אושרה על-ידי Woolmark לכביסה של מוצרי Woolmark הניתנים לכביסה במכונה, בתנאי שהמוצרים מכובסים בהתאם להוראות המוטבעות בתווית הבגד ולהוראות יצרן מכונת הכביסה, M1124 (מספר אישור פורסם על-ידי .I.W.S. Nominee Co., Ltd) **Hand Wash** (כביסה ידנית) - תוכנית כביסה עדינה במיוחד בדומה לכביסה ביד. **Spin** (סחיטה) - מבצעת מחזור סחיטה נוסף לסילוק מים עודפים. **Rinse + Spin** (שטיפה וסחיטה) - לכביסה הדורשת שטיפה בלבד או לשילוב מרכך כביסה שהוספת.
3 **בורר PRE-WASH (שטיפה מקדימה)**	לחץ על כפתור זה כדי לבחור בשטיפה מקדימה. שטיפה מקדימה זמינה רק בתוכניות: Cotton (כותנה), Synthetics (סינטטי), Denim (אריג גס), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה), Baby Care (בגדי ילדים ותינוקות).
4 **בורר DELAY END (השהיית סיום)**	לחץ על כפתור זה מספר פעמים כדי לעבור בין האפשרויות השונות להשהיית הסיום (בין 3 שעות ל-19 שעות במרווחים של שעה אחת). השעה המוצגת מציינת את זמן הסיום של מחזור הכביסה.
5 **בורר TEMPERATURE (טמפרטורה)**	לחץ על כפתור זה מספר פעמים כדי לעבור בין האפשרויות הזמינות של טמפרטורת המים: (מים קרים, 30 ˚C, 40 ˚C , 60 ˚C ו-95 ˚C).
6 **בורר RINSE (שטיפה)**	לחץ על כפתור זה להוספת עוד מחזורי שטיפה. מספר מחזורי השטיפה המרבי הוא חמישה.
7 **בורר SPIN (מהירות סחיטה)**	לחץ על הכפתור מספר פעמים כדי לעבור בין המהירויות הזמינות של מחזור הסחיטה. WF0806: ⊗, 400, 800, 1,200, 1,400, 1,600 סל"ד WF0804: ⊗, 400, 800, 1,200, 1,400 סל"ד WF0802: ⊗, 400, 800, 1,000, 1,200 סל"ד "ללא סחיטה ⊗" - הכביסה נשארת בתוף ולא מתבצע מחזור סחיטה לאחר הניקוז האחרון.
8 **בורר OPTION (אפשרויות)**	לחץ על כפתור זה מספר פעמים כדי לעבור בין האפשרויות הבאות: גיהוץ קל ← השרייה ← שטיפה מוגברת ← גיהוץ קל + השרייה ← גיהוץ קל + שטיפה מוגברת ← השרייה + שטיפה מוגברת ← גיהוץ קל + שטיפה מוגברת + השרייה ← כיבוי "גיהוץ קל": השתמש באפשרות זו כדי להכין את הכביסה לגיהוץ קל. "השרייה": השתמש באפשרות זו להסרה יעילה של כתמים מהכביסה על-ידי השריית הכביסה. • פעולת ההשרייה מתבצעת 13 דקות לאחר תחילת מחזור הכביסה. • פעולת ההשרייה נמשכת 30 דקות עם שישה מחזורים, כאשר מחזור אחד הוא מחזור השרייה הכולל סחיטה של דקה אחת ולאחריה עצירה של 4 דקות. • פעולת ההשרייה זמינה רק עבור תוכניות הכביסה הבאות: Cotton (כותנה), Synthetics (סינטטי), Denim (אריג גס), Bedding (מצעים), Daily Wash (כביסה רגילה), Baby Care (בגדי ילדים ותינוקות). "שטיפה מוגברת": לחץ על כפתור זה כאשר הכבסים מלוכלכים מאוד ודורשים שטיפה בעוצמה מוגברת. משך המחזור מתארך בכל תוכנית.

WF0804Y8E-02842J_HB.indd 23 2011-5-24 16:16:17

כביסה במכונה

9 בורר QUICK WASH (כביסה מהירה)	לבגדים בדרגת לכלוך קלה, במשקל של עד 2 ק"ג, הדרושים לך במהירות. התוכנית נמשכת כ-15 דקות לכל הפחות, אך פרק זמן זה עשוי להשתנות מהערך שצוין בהתאם ללחץ המים, רמת הקושי של המים, הטמפרטורה של פתח כניסת המים, טמפרטורת החדר, סוג וכמות הכביסה ודרגת הלכלוך, סוג אבקת הכביסה, משקל לא מאוזן של הכביסה במכונה, תנודות באספקת החשמל ואפשרויות נוספות שנבחרות. • לחץ על כפתור זה מספר פעמים כדי לבחור את משך המחזור: 15 דק' ← 20 דק' ← 30 דק' ← 40 דק' ← 50 דק' ← 60 דק' ← כיבוי ⚠ אזהרה כדי להבטיח סילוק של כל שאריות חומרי הכביסה מהבגדים, אין להוסיף יותר מ-20 גר' אבקה או נוזל כביסה (למשקל כביסה של 2 ק"ג).
10 בורר ECO BUBBLE	הבחירה ב-Eco Bubble מופעלת כברירת מחדל. לחץ על כפתור האפשרות Eco Bubble פעם אחת כדי לבטל את הבחירה ולכבות את יוצר הבועות (מוצג על-גבי הלוח), לחץ עליו שוב כדי לחזור ולהפעיל את הפונקציה. • בחלק מתוכניות הכביסה חובה להפעיל את האפשרות Eco Bubble (הדבר יוצג על-גבי הלוח ויוצר הבועות יופעל באופן אוטומטי). • תוכניות כביסה אחרות אינן זקוקות לאפשרות זו ומכבות את יוצר הבועות באופן אוטומטי. • בתוכניות רבות, ניתן לכוונן אפשרות זו באופן ידני, דבר שישפיע בצורה ברורה על משך הזמן הנותר לסיום מחזור הכביסה המוצג על-גבי הלוח (ראה עמוד 27 לקבלת מידע נוסף).
11 בורר START/PAUSE (התחל/השהה)	לחץ להשהייה של מחזור כביסה ולהפעלתו מחדש.
12 בורר MY CYCLE (התוכנית שלי)	בחר את התוכנית המועדפת עליך כולל טמפרטורה, מהירות סחיטה, דרגת לכלוך, אפשרויות ועוד.
13 כפתור POWER (הפעלה)	לחץ עליו פעם אחת כדי להפעיל את מכונת הכביסה, ולחץ עליו שוב כדי לכבות את מכונת הכביסה. אם חולפות יותר מ-10 דקות מבלי שנלחץ כפתור כלשהו, מכונת הכביסה נכבית באופן אוטומטי.

WF0804Y8E-02842J_HB.indd 24 2011-5-24 16:16:18

נעילה בפני ילדים

הפונקציה 'נעילה בפני ילדים' מאפשרת לך לנעול את הכפתורים כך שלא ניתן יהיה לשנות את מחזור הכביסה הנבחר.

הפעלה/השבתה

אם ברצונך להפעיל או להשבית את הפונקציה 'נעילה בפני ילדים', לחץ על הכפתורים **Temp.** (טמפרטורה) ו-**Rinse** (שטיפה) בו-זמנית במשך 3 שניות. "נורית נעילה בפני ילדים" תאיר כשמאפיין זה יופעל.

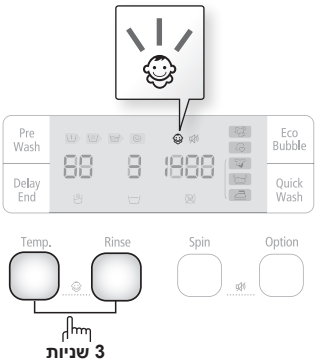

כאשר הפונקציה 'נעילה בפני ילדים' מופעלת, לחצן **Power** (הפעלה) הוא היחיד שאינו מושבת. הפונקציה 'נעילה בפני ילדים' אינה חדלה לפעול גם לאחר לחיצה על לחצן ההפעלה לצורך הפעלה או כיבוי, וגם לאחר ניתוק וחיבור מחדש של כבל החשמל.

שקט

ניתן לבחור בפונקציה 'שקט' בכל התוכניות. כאשר פונקציה זו נבחרת, הקול נכבה עבור כל התוכניות. גם לאחר שמכבים ומפעילים את המכונה מספר פעמים, הגדרה זו נשמרת.

הפעלה/השבתה

אם ברצונך להפעיל או להשבית את הפונקציה 'שקט', לחץ על הכפתורים **Spin** (סחיטה) ו-**Option** (אפשרויות) בו-זמנית במשך 3 שניות. הנורית "שקט" תאיר כשמאפיין זה יופעל.

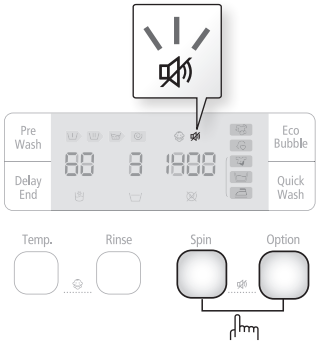

WF0804Y8E-02842J_HB.indd 25 2011-5-24 16:16:19

כביסה במכונה

Delay end (השהיית סיום)

ניתן להגדיר את מכונת הכביסה לסיום הכביסה באופן אוטומטי במועד מאוחר יותר, על-ידי בחירת השהייה של בין 3 ל-19 שעות (במרווחים של שעה אחת). השעה המוצגת מציינת את זמן סיום הכביסה.

1. הגדר את פעולת מכונת הכביסה באופן ידני או אוטומטי לפי סוג הכביסה שעליך לכבס.
2. לחץ על כפתור **Delay End** (השהיית סיום) מספר פעמים עד לקביעת זמן ההשהייה.
3. לחץ על כפתור **Start/Pause** (התחל/השהה). נורית החיווי של "Delay End ⏲" תאיר ותחל ספירה לאחור עד שהשעון יגיע לשעה שנקבעה.
4. לביטול הפונקציה Delay End (השהיית סיום), לחץ על כפתור **Power** (הפעלה) ולאחר מכן הפעל שוב את מכונת הכביסה.

My Cycle (התוכנית שלי)

מאפשרת לך להפעיל תוכנית כביסה בהתאמה אישית (טמפרטורה, מהירות סחיטה, דרגת לכלוך וכדומה) בלחיצת כפתור אחת.

לחיצה על כפתור **My Cycle** (התוכנית שלי), טוענת את האפשרויות של כפתור My Cycle (התוכנית שלי) ומשתמשת באפשרויות השמורות של My Cycle (התוכנית שלי). הנורית "My Cycle" (התוכנית שלי) תציין כי האפשרות מופעלת. בנוסף, יהבהבו הנוריות של התוכנית והאפשרויות שנבחרו.

במצב My Cycle (התוכנית שלי) ניתן להגדיר את כל האפשרויות הבאות.

1. לפתוח את ברז אספקת המים.
2. ללחוץ על כפתור **Power** (הפעלה).
3. לבחור תוכנית באמצעות **בורר התוכניות**.
4. לאחר בחירת התוכנית, להגדיר כל אפשרות.

ראה את "טבלת התוכניות" בעמ' 39 להגדרות האפשרויות הזמינות בכל תוכנית.

5. לאחר מכן ניתן לשמור בזיכרון את התוכנית והאפשרויות שנבחרו על-ידי לחיצה ממושכת על כפתור **My Cycle** (התוכנית שלי) במשך יותר מ-3 שניות במצב My Cycle (התוכנית שלי). התוכנית והאפשרויות שתבחר יוצגו בפעם הבאה שתבחר בפונקציית My Cycle (התוכנית שלי).

ניתן לשנות את הגדרות My Cycle (התוכנית שלי) על-ידי חזרה על התהליך שתואר לעיל. ההגדרה האחרונה שנקבעה תוצג בפעם הבאה שתבחר בפונקציית My Cycle (התוכנית שלי).

אם תלחץ על כפתור My Cycle (התוכנית שלי) ותרפה בתוך 3 שניות, יופיעו התוכנית והאפשרויות שנשמרו לאחרונה. אם תלחץ ממושכות על My Cycle (התוכנית שלי) במשך למעלה מ-3 שניות, התוכנית והאפשרויות המוגדרות כעת יישמרו והנורית תהבהב במשך 3 שניות.

WF0804Y8E-02842J_HB.indd 26 2011-5-24 16:16:19

Eco Bubble

הודות ל-Eco Bubble חומרי הכביסה מתפזרים בצורה שווה וחודרים מהר יותר ועמוק יותר לסיבי הבד.

פונקציית הבועות זמינה בכל התוכניות למעט תוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה). זמינות הפונקציה מפורטת בטבלה הבאה.

תוכנית	פונקציית בועות	ביטול פונקציית הבועות
Cotton (כותנה), Synthetics (סינטטי), Denim (אריג גס), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה).	זמינה	זמינה
Super Eco Wash (כביסה חסכונית במיוחד), Outdoor Care (בגדי טיול ועבודה), Baby Care (בגדי ילדים ותינוקות), Wool (צמר), Hand Wash (כביסה ידנית)		לא זמינה
Eco Drum Clean (ניקוי תוף ידידותי לסביבה)	לא זמינה	-

- ייתכן שפונקציית בועות שונה תיושם בהתאם לתוכנית.

הבחירה ב-Eco Bubble היא ברירת מחדל. לחץ על הכפתור פעם אחת כדי לבטל את הבחירה באפשרות הבועות, לחץ עליו שוב כדי לבחור באפשרות הבועות.

1. פתח את הדלת, הכנס את הכביסה לתוף וסגור את הדלת.
2. לחץ על כפתור **Power** (הפעלה).
3. בחר פונקציה.
4. הכנס כמות מתאימה של אבקת כביסה ומרכך כביסה לתאים המתאימים בהתאם לכמות הכביסה וסגור את מגירת חומרי הכביסה.

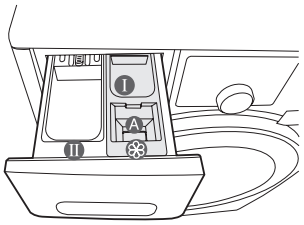

- הוסף כמות מתאימה של אבקת כביסה לתא אבקת הכביסה Ⅱ, והוסף את מרכך הכביסה לתא המרכך ❀ רק עד למפלס המרכך המרבי המצוין על-ידי קו הקצה התחתון (MAX) של "A".
- אם בחרת בתוכנית Prewash (שטיפה מקדימה), הוסף אבקת כביסה לתא השטיפה המקדימה Ⅰ בנוסף.
- לכביסה באמצעות נוזל כביסה, השאר את תיבת נוזל הכביסה במגירה (עיין בסעיף "נוזל כביסה" בעמוד 31).

אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.

5. לחץ על כפתור Start/Pause (התחל/השהה).
- לחץ על כפתור **Start/Pause** (התחל/השהה) כדי להתחיל את פעולת הכביסה.
- מתבצע זיהוי אוטומטי של כמות הכביסה ופעולת הכביסה מתחילה.
- לאחר שפעולת מכונת הכביסה מתחילה, לא ניתן להוסיף או לבחור את פונקציית הבועות.

- אם מוסיפים אבקת כביסה בכמות שצוינה, נוצרת כמות מספקת של בועות.
- יש לנקות את מסנן פסולת לעתים קרובות. ניקוי מעת לעת מסייע ליצירת כמות מספקת של בועות.
- בהתאם לכמות אבקת הכביסה וכמות הכביסה, ייתכן שהבועות ייספגו וייראו ככמות קטנה.
- אף שבועות נוצרות מיד עם תחילת פעולת הכביסה, ייתכן שיחלפו כמה דקות עד שתבחין בהן.

WF0804Y8E-02842J_HB.indd 27 2011-5-24 16:16:20

כביסה במכונה

ביצוע כביסה באמצעות בורר התוכניות

עם מכונת הכביסה החדשה שרכשת, פעולת הכביסה היא קלה הודות למערכת הבקרה האוטומטית "Fuzzy Control" של Samsung. לאחר שתבחר תוכנית כביסה, המכונה תקבע את הטמפרטורה, משך הכביסה והמהירות המתאימים.

1. פתח את ברז המים בכיור.
2. לחץ על כפתור **Power** (הפעלה).
3. פתח את הדלת.
4. הכנס את פריטי הכביסה בזה אחר זה לתוך התוף, מבלי להעמיס עליו יתר על המידה.
5. סגור את הדלת.
6. הוסף לתאים המתאימים אבקת כביסה, מרכך, וחומר כביסה לשטיפה מקדימה (במידת הצורך).

שטיפה מקדימה זמינה רק בבחירת התוכניות Cotton (כותנה), Synthetics (סינטטי), Denim (אריג גס), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה) ו-Baby care (בגדי ילדים ותינוקות). היא נחוצה רק אם הבגדים מלוכלכים במיוחד.

7. השתמש ב**בורר התוכניות** לבחירת התוכנית המתאימה בהתאם לסוג החומר: Cotton (כותנה), Synthetics (סינטטי), Denim (אריג גס), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה), Super Eco Wash (כביסה חסכונית במיוחד), Outdoor Care (בגדי טיול ועבודה), Baby Care (בגדי ילדים ותינוקות), Wool (צמר), Hand Wash (כביסה ידנית). נוריות החיווי הרלוונטיות יאירו בלוח הבקרה.
8. בשלב זה, ניתן לשלוט בטמפרטורת הכביסה, בכמות השטיפות, במהירות הסחיטה ובזמן ההשהייה על-ידי לחיצה על כפתור האפשרות המתאימה.
9. לחץ על כפתור **Start/Pause** (התחל/השהה) והכביסה תחל. נורית החיווי של התהליך תאיר והזמן הנותר לסיום המחזור יופיע על-גבי התצוגה.

אפשרות השהייה

ב-5 הדקות הראשונות שחולפות מתחילת מחזור הכביסה, ניתן להוסיף/להסיר פריטי כביסה.

1. לחץ על כפתור **Start/Pause** (התחל/השהה) כדי לשחרר את נעילת הדלת.

לא ניתן לפתוח את הדלת כשהמים חמים מדי או כשמפלס המים גבוה מדי.

2. לאחר סגירת הדלת, לחץ על כפתור **Start/Pause** (התחל/השהה) כדי לחדש את פעולת הכביסה.

כשמחזור הכביסה מסתיים:

לאחר סיום המחזור כולו, המכונה תכבה באופן אוטומטי.

1. פתח את הדלת.
2. הוצא את הכביסה.

WF0804Y8E-02842J_HB.indd 28 2011-5-24 16:16:20

ביצוע כביסה באופן ידני

ניתן לבצע את פעולת הכביסה באופן ידני מבלי להשתמש בבורר התוכניות.

1. פתח את ברז אספקת המים.
2. לחץ על כפתור **Power** (הפעלה) במכונת הכביסה.
3. פתח את הדלת.
4. הכנס את פריטי הכביסה לתוך התוף בזה אחר זה, מבלי להעמיס עליו יתר על המידה.
5. סגור את הדלת.
6. הוסף לתאים המתאימים אבקת כביסה, ובמידת הצורך גם מרכך או חומר כביסה לשטיפה מקדימה.
7. לחץ על כפתור **.Temp** (טמפרטורה) לבחירת הטמפרטורה. (מים קרים, 30˚C, 40˚C, 60˚C, 95˚C)
8. לחץ על כפתור **Rinse** (שטיפה) לבחירה במספר מחזורי השטיפה המבוקש.
   מספר מחזורי השטיפה המרבי הוא חמישה.
   משך השטיפה יתארך בהתאם.
9. לחץ על כפתור **Spin** (סחיטה) לבחירת מהירות הסחיטה. (⊗ : ללא סחיטה)
10. לחץ על כפתור **Delay End** (השהיית סיום) מספר פעמים כדי לעבור בין האפשרויות השונות להשהיית הסיום (בין 3 שעות ל-19 שעות במרווחים של שעה אחת). השעה המוצגת מציינת את זמן סיום הכביסה.
11. לחץ על כפתור **Start/Pause** (התחל/השהה) ומחזור הכביסה יתחיל.

הנחיות לכביסה

פעל בהתאם להנחיות הפשוטות הבאות לקבלת כביסה נקיה במיוחד ויעילות מרבית בהפעלה.

לפני שתתחיל, בדוק תמיד מה מצויין על תווית הוראות הכביסה.

מיין וכבס את הכביסה על-פי הקריטריונים הבאים:

- תווית הוראות כביסה: מיין כביסה לפריטי כותנה, תערובת סיבים, חומרים סינטטיים, משי, צמר וויסקוזה.
- צבע: הפרד בין פריטים לבנים לצבעוניים. כבס פריטים צבעוניים חדשים בנפרד.
- גודל: הכנסת פרטים בגדלים שונים לאותה מכונה תשפר את פעולת הכביסה.
- רגישות: כבס פריטים עדינים בנפרד, והשתמש במחזור הכביסה העדינה לפריטים חדשים עשויים צמר טהור, לוילונות ולפריטי משי. בדוק את תוויות הוראות הכביסה על הפריטים שאתה מכבס, או עיין בטבלת הטיפול בבדים בפרק הנספחים.

ריקון כיסים

לפני כל כביסה, רוקן את כל הכיסים של פריטי הלבוש. חפצים קשים, קטנים ובעלי צורה חריגה, כגון מטבעות, סכינים, סיכות ומהדקים עלולים לגרום נזק למכונת הכביסה. אל תכבס בגדים בעלי אבזמים וכפתורים גדולים, או אביזרי מתכת כבדים אחרים.

אביזרי מתכת על בגדים עלולים לגרום נזק לבגדים כמו גם לתוף. לפני הכביסה, הפוך בגדים בעלי כפתורים ובגדים רקומים מבפנים כלפי חוץ. אם תשאיר רוכסנים פתוחים של מכנסיים ומקטורנים במהלך הכביסה, הדבר עלול לגרום נזק לסל הסחיטה. יש לסגור ולתקן רוכסנים בקשירה לפני הכביסה.

בגדים בעלי חוטים ארוכים עלולים להסתבך בבגדים אחרים ולגרום להם נזק. הקפד לסדר מראש את החוטים כך שלא יפריעו למהלך הכביסה.

שטיפה מקדימה של פריטי כותנה

מכונת הכביסה החדשה שלך, בשילוב עם אבקות כביסה חדישות, תעניק לך תוצאות כביסה מושלמות תוך חיסכון באנרגיה, זמן, מים וחומרי כביסה. עם זאת, אם פריטי הכותנה מלוכלכים במיוחד, בצע שטיפה מקדימה עם אבקת כביסה על בסיס חלבון.

WF0804Y8E-02842J_HB.indd 29 2011-5-24 16:16:20

כביסה במכונה

בדיקת הקיבולת המתאימה
לקבלת תוצאות כביסה מיטביות, אל תעמיס את מכונת הכביסה יתר על המידה. השתמש בטבלה הבאה כדי לקבוע מהי הקיבולת המתאימה עבור סוג הכביסה שאתה מכבס.

סוג הבד	קיבולת
דגם	WF0806 / WF0804 / WF0802
Cotton (כותנה) **- פריטים מלוכלכים ברמה בינונית או מועטה** **- פריטים מלוכלכים מאוד**	8.0 ק"ג
Synthetics (סינטטי)	3.0 ק"ג
Denim (אריג גס)	3.0 ק"ג
Bedding (מצעים)	2.0 ק"ג
Outdoor Wear (בגדי טיול ועבודה)	2.0 ק"ג
Wool (צמר)	2.0 ק"ג

- כשהכביסה אינה מאוזנת (החיווי "UE" מופיע על-גבי התצוגה), פזר מחדש את הפריטים בתוף. כשהכביסה אינה מאוזנת, נפגעת יעילות הסחיטה.
- בכביסת מצעים או ציפות, זמן הכביסה עשוי להתארך ולחלופין יעילות הסחיטה עלולה להיפגע.
- בכביסת מצעים או ציפות, הקיבולת המומלצת היא 2.0 ק"ג לכל היותר.

הקפד להכניס חזיות (הניתנות לשטיפה במים) לרשת כביסה (לרכישה בנפרד).

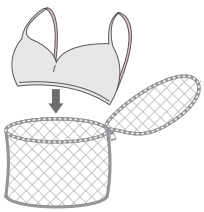

- חלקי המתכת של החזיות עלולים לחדור דרך הבד ולהזיק לכביסה. על כן, הקפד להניח אותן בתוך רשת כביסה צפופה.
- פריטי לבוש קטנים וקלים כמו גרביים, כפפות, גרבי ניילון וממחטות עלולים להיתפס בדלת. הכנס אותם לרשת כביסה צפופה.

אזהרות אין לכבס את רשת הכביסה בלבד ללא כביסה אחרת. הדבר עלול לגרום לרעידות חריגות ולתזוזת מכונת הכביסה ולהוביל עקב כך לתאונה ולפציעה.

מידע על חומרי כביסה ותוספים

בחירת חומר הכביסה לשימוש

סוג חומר הכביסה שבו תשתמש תלוי בסוג הבד (כותנה, חומר סינטטי, פריטים עדינים, צמר), בצבע, בטמפרטורת הכביסה ובדרגת הלכלוך. השתמש תמיד באבקת כביסה שאינה מקציפה, המיועדת למכונות כביסה אוטומטיות.
עקוב אחר ההמלצות של יצרן אבקת הכביסה בהתאם למשקל הכביסה, לדרגת הלכלוך ולרמת הקושי של המים באזורך. אם אינך יודע מהי רמת הקושי של המים, ברר זאת ברשות המים המקומית.

אל תשתמש באבקת כביסה אשר מתקשה או מתגבשת שכן היא עלולה להותיר שאריות גם לאחר מחזור השטיפה. היא עלולה לפגוע בתהליך השטיפה התקין של מכונת הכביסה או לגרום לחסימה.

WF0804Y8E-02842J_HB.indd 30 2011-5-24 16:16:21

מגירת חומרי הכביסה

במכונת הכביסה קיימים תאים נפרדים להזנת אבקת כביסה ומרכך כביסה. הוסף את כל תוספי הכביסה לתא המתאים לפני תחילת פעולת הכביסה.

אל תפתח את מגירת חומרי הכביסה כאשר מכונת הכביסה פועלת, שכן אתה עלול לבוא במגע עם מים חמים או קיטור.

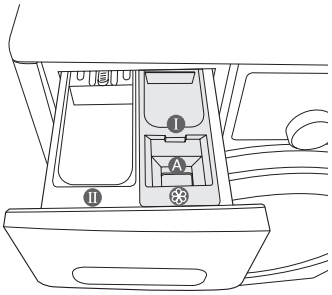

1. משוך החוצה את מגירת חומרי הכביסה בצידו השמאלי של לוח הבקרה.
2. הוסף את הכמות המומלצת של אבקת כביסה ישירות לתא אבקת הכביסה Ⅱ לפני תחילת פעולת הכביסה.

לכביסה באמצעות נוזל כביסה, השתמש בתיבת נוזל הכביסה (עיין בסעיף "נוזל כביסה" לאיתור הדגם המתאים).

- אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.

3. הוסף את הכמות המומלצת של מרכך כביסה לתא המרכך ❀ בהתאם לצורך. אל תחרוג מקו המילוי המרבי (Ⓐ).

זהירות אל תוסיף שום **חומר כביסה** (אבקה או נוזל) לתא המרכך (❀).

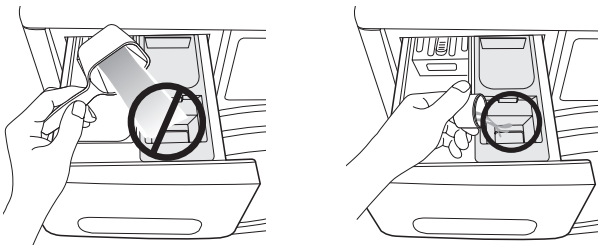

4. בעת שימוש באפשרות 'שטיפה מקדימה', הוסף את הכמות המומלצת של חומר הכביסה לתא השטיפה המקדימה Ⓘ.

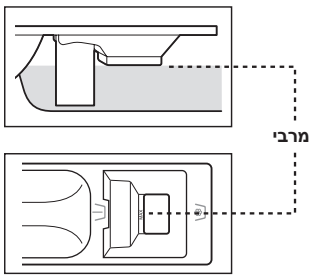

בכביסה של פריטים גדולים אל תשתמש בסוגי אבקת הכביסה הבאים.

- טבליות או כמוסות של אבקת כביסה
- אבקות כביסה בתוך כדור ורשת

חובה לדלל מרככי כביסה מרוכזים וסמיכים במעט מים לפני הכנסתם לתא ההזנה (כדי למנוע סתימה).

שים לב כי מרכך הכביסה אינו עולה על גדותיו, בעת סגירת המגירה של חומרי הכביסה לאחר הוספת מרכך כביסה לתא המרכך.

נוזל כביסה (בדגמים נבחרים)

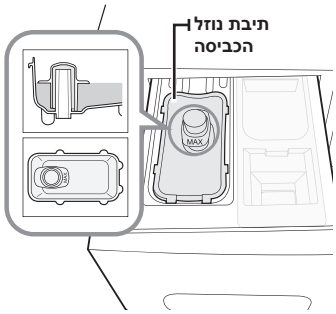

לכביסה באמצעות נוזל כביסה, הנח את תיבת נוזל הכביסה בתוך אזור חומר הכביסה העיקרי של מגירת חומרי הכביסה ושפוך נוזל כביסה לתיבת נוזל הכביסה.

- אל תשפוך נוזל מעל קו המילוי המרבי.
- בעת שימוש באבקת כביסה, הסר את תיבת נוזל הכביסה ממגירת חומרי הכביסה. אם תיבת נוזל הכביסה נשארת בפנים, נמנעת הזנה של אבקת הכביסה.
- בתום הכביסה, עשוי להישאר מעט נוזל במגירת חומרי הכביסה.

WF0804Y8E-02842J_HB.indd 31 2011-5-24 16:16:22

ניקוי ותחזוקה של מכונת הכביסה

שמירה על ניקיון מכונת הכביסה משפרת את פעולתה, מונעת תיקונים מיותרים ומאריכה את חייה.

ECO DRUM CLEAN (ניקוי תוף ידידותי לסביבה)

תוכנית זו היא תוכנית ניקוי עצמי להסרת עובש שעלול להיווצר בתוך מכונת הכביסה.

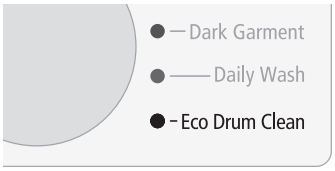

1. לחץ על כפתור **Power** (הפעלה).
2. כוון את **בורר התוכניות** לתוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה).
   - באפשרותך להשתמש רק בפונקציה Delay End (השהיית סיום).
   - טמפרטורת המים במהלך Eco Drum Clean (ניקוי תוף ידידותי לסביבה) מוגדרת ל- 70˚C.

לא ניתן לשנות את הטמפרטורה.

3. שפוך כמות מתאימה של תכשיר ניקוי לתא אבקת הכביסה Ⅱ וסגור את מגירת חומרי הכביסה (בעת ניקוי התוף באמצעות תכשיר ניקוי).
   - הקפד להשתמש בתכשיר הניקוי המומלץ לניקוי תוף.
   - קיימים תכשירי ניקוי בצורת אבקה ובצורת נוזל לניקוי התוף. ניתן להשתמש בתכשיר הניקוי בצורת נוזל רק עם תיבת נוזל הכביסה (אופציונלי).

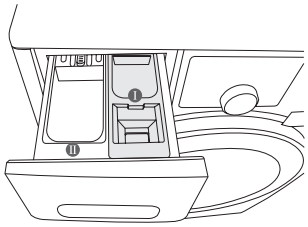

4. לחץ על כפתור **Start/Pause** (התחל/השהה).
   - לאחר שתלחץ על כפתור **Start/Pause** (התחל/השהה), התוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה) תתחיל לפעול.

זהירות

- תוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה) מאפשרת לנקות את התוף מבלי להשתמש בתכשיר ניקוי.
- לעולם אל תשתמש בתוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה) כאשר יש כביסה במכונת הכביסה. פעולה זו עלולה לגרום נזק למרקם הכביסה או לבעיה במכונת הכביסה.
- **לעולם אל תשתמש בחומר כביסה רגיל בתוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה).**
- **השתמש רק בעשירית הכמות של תכשיר הניקוי לתוף המומלצת על-ידי יצרן תכשיר הניקוי.**
- מאחר ששימוש בחומר הלבנה על-בסיס כלור עלול לגרום לשינוי צבע במוצר, הקפד להשתמש רק בחומרי הלבנה על בסיס חמצן.
- תכשיר ניקוי מסוג אבקה: השתמש ב[חומר הלבנה מסוג אבקה] או ב [תכשיר ניקוי המיועד לניקוי תוף בלבד].
- תכשיר ניקוי מסוג נוזל: השתמש ב[חומר הלבנה על-בסיס חמצן מסוג נוזל] או ב [תכשיר ניקוי המיועד לניקוי תוף בלבד].

WF0804Y8E-02842J_HB.indd 32 2011-5-24 16:16:23

פונקציית ההתראה האוטומטית של Eco Drum Clean (ניקוי תוף ידידותי לסביבה)

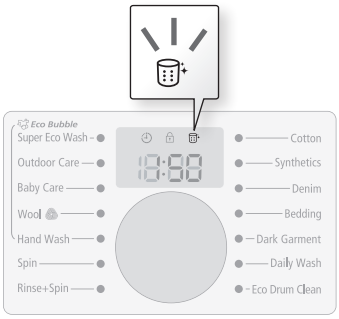

- אם המחוון של "Eco Drum Clean" (ניקוי תוף ידידותי לסביבה) על-גבי התצוגה והנורית על בורר התוכניות מאירים לאחר כביסה, פירוש הדבר כי נדרש ניקוי תוף. במקרה זה, הוצא את הכביסה ממכונת הכביסה, לחץ על לחצן ההפעלה ונקה את התוף על-ידי ביצוע תוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה).
- אם לא תבצע את תוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה), המחוון של "Eco Drum Clean" על-גבי התצוגה והנורית על בורר התוכניות ייכבו. אולם, לאחר שתי הפעלות של מכונת הכביסה, המחוון של "Eco Drum Clean" על-גבי התצוגה והנורית על בורר התוכניות יאירו שוב. אין לכך השפעה על פעולת מכונת הכביסה.
- אף שבדרך כלל, ההתראה האוטומטית של Eco Drum Clean (ניקוי תוף ידידותי לסביבה) מופיעה אחת לחודש בקירוב, פרק זמן זה עשוי להשתנות בהתאם לתדירות השימוש במכונת הכביסה.
- **במקרה של התראה, נקה גם את מסנן הפסולת (עיין בסעיף "ניקוי מסנן הפסולת" בעמוד 34). אם לא תעשה כן, הביצועים של פונקציית הבועות עלולים להיפגע.**

ניקוז מכונת הכביסה במקרה חירום

1. נתק את מכונת הכביסה מהחשמל.
2. פתח את מכסה המסנן על-ידי לחיצה כלפי מטה ומשיכת הידית.

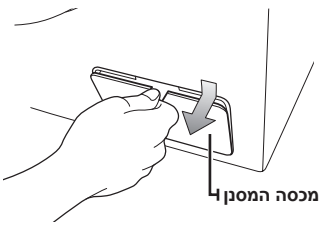

3. פתח את הפקק של צינור ניקוז החירום על-ידי משיכתו.

4. החזק את הפקק בקצה צינור ניקוז החירום ומשוך אותו באיטיות כ-15 ס"מ החוצה.
5. הנח למים לזרום לקערה.

כמות המים עשויה להיות גדולה מהצפוי. הכן קערה גדולה.

6. חבר מחדש את הפקק של צינור ניקוז החירום והכנס את צינור הניקוז.
7. החזר את מכסה המסנן למקומו.

WF0804Y8E-02842J_HB.indd 33 2011-5-24 16:16:24

ניקוי ותחזוקה של מכונת הכביסה

ניקוי מסנן הפסולת

אנו ממליצים לנקות את מסנן הפסולת 5 או 6 פעמים בשנה, או כאשר הודעת השגיאה "5E" מופיעה על-גבי התצוגה. (עיין בסעיף הקודם: "ניקוז מכונת הכביסה במקרה חירום".)
אם חומר זר מצטבר במסנן הפסולת, הביצועים של פונקציית הבועות עלולים להיפגע.

זהירות לפני ניקוי מסנן הפסולת, הקפד לנתק את כבל החשמל.

1. תחילה נקז את המים המיותרים (עיין בסעיף "ניקוז מכונת הכביסה במקרה חירום" בעמוד 33).

אם תפריד את המסנן מבלי לנקז את יתרת המים, הם עלולים לזרום החוצה.

2. פתח את מכסה המסנן באמצעות מפתח או מטבע.
3. הברג החוצה את הפקק של צינור ניקוז החירום על-ידי סיבובו שמאלה ונקז את כל המים.
4. הברג החוצה את פקק מסנן הפסולת.

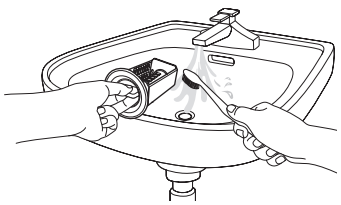

5. נקה לכלוך או חומרים אחרים ממסנן הפסולת. ודא שמדחף משאבת הניקוז מאחורי מסנן הפסולת אינו חסום.
6. החזר את הפקק של מסנן הפסולת למקומו.
7. החזר את מכסה המסנן למקומו.

זהירות אל תפתח את פקק מסנן הפסולת כאשר מכונת הכביסה פועלת, שכן מים חמים עלולים לזרום החוצה.

- הקפד להחזיר את מכסה המסנן למקומו לאחר ניקוי המסנן. מסנן שלא יוחזר למקומו, עלולה לגרום לנזילת מים או לתקלה בפעולת מכונת הכביסה.
- לאחר ניקוי המסנן יש להרכיב את המסנן במלואו.

ניקוי החלק החיצוני

1. נגב את משטחי מכונת הכביסה, כולל לוח הבקרה, במטלית רכה הספוגה בחומר ניקוי ביתי שאינו שורט.
2. השתמש במטלית רכה לייבוש משטחי המכונה.
3. אל תשפוך מים על מכונת הכביסה.

WF0804Y8E-02842J_HB.indd 34 2011-5-24 16:16:25

ניקוי מגירת חומרי הכביסה ומסילות המגירה

1. לחץ על תפס השחרור בחלק הפנימי של מגירת חומרי הכביסה ומשוך החוצה את המגירה.
2. הסר את המחיצה המפרידה של המרכך ואת תיבת נוזל הכביסה (אופציונלי) ממגירת חומרי הכביסה.

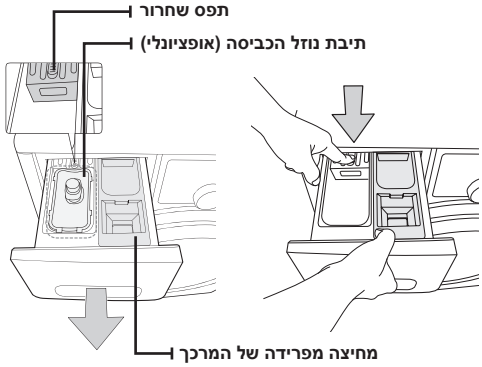

3. שטוף את כל החלקים תחת מים זורמים.

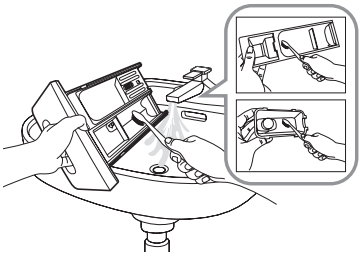

4. נקה את מסילות המגירה בעזרת מברשת שיניים ישנה.
5. החזר את המחיצה המפרידה של המרכך ואת תיבת נוזל הכביסה (אופציונלי) למקומן על-ידי דחיפתן בכוח לתוך המגירה.
6. דחוף את המגירה בחזרה למקומה.
7. כדי להסיר שאריות של חומרי כביסה, הפעל מחזור שטיפה ללא כביסה בתוף.

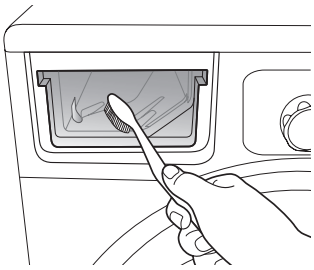

ניקוי מסנן הרשת של צינור המים

עליך לנקות את מסנן הרשת של צינור המים לפחות פעם בשנה, או כאשר הודעת השגיאה "4E" מופיעה על-גבי התצוגה:

1. סגור את ברז אספקת המים למכונת הכביסה.
2. הברג החוצה את הצינור מגב מכונת הכביסה. כדי למנוע זרימה של מים החוצה בשל לחץ אוויר בצינור, כסה את הצינור במטלית.
3. משוך בעדינות את מסנן הרשת מקצה הצינור באמצעות מלקחיים ושטוף אותו תחת זרם מים עד להסרת כל הלכלוך. נקה בנוסף גם את חלקו הפנימי והחיצוני של המחבר עם התבריג.
4. דחוף את המסנן בחזרה למקומו.
5. הברג את הצינור בחזרה למכונת הכביסה.
6. ודא שהחיבורים מהודקים ואטומים למים ופתח את הברז.

WF0804Y8E-02842J_HB.indd 35 2011-5-24 16:16:27

ניקוי ותחזוקה של מכונת הכביסה

תיקון מכונת כביסה שקפאה

אם הטמפרטורה צונחת מתחת לנקודת הקיפאון ומכונת הכביסה שלך קופאת:

1. נתק את מכונת הכביסה מהחשמל.
2. שפוך על הברז מים חמים כדי לשחרר את צינור אספקת המים.
3. הסר את צינור אספקת המים וטבול אותו במים חמים.
4. שפוך מים חמים לתוך תוף מכונת הכביסה והשאר אותם שם למשך 10 דקות.
5. חבר מחדש את צינור אספקת המים לברז המים ובדוק אם אספקת המים והניקוז פועלים כרגיל.

אחסון מכונת הכביסה

אם עליך לאחסן את מכונת הכביסה לזמן ממושך, מומלץ לנקז את המים מתוכה ולנתק אותה מהחשמל. מים שנותרו בצינורות וברכיבים הפנימיים ולא נוקזו לפני האחסון עלולים לגרום נזק למכונות כביסה.

1. בחר בתוכנית **Cotton** (כותנה) והוסף מלבין לתא החומר המלבין. לאחר מכן, לחץ על כפתור **Quick Wash** (שטיפה מהירה) והפעל את מכונת הכביסה עד לסיום המחזור כשהיא ריקה מכביסה.
2. סגור את ברזי המים ונתק את צינורות הכניסה.
3. נתק את מכונת הכביסה משקע החשמל והשאר את דלת מכונת הכביסה פתוחה כדי לאפשר לתוף להתאוורר.

אם מכונת הכביסה אוחסנה בטמפרטורה מתחת לאפס, הנח למים שנשארו במכונה להפשיר לפני השימוש בה.

WF0804Y8E-02842J_HB.indd 36 2011-5-24 16:16:27

פתרון בעיות וקודי מידע

עיין בהצעות הבאות אם מכונת הכביסה שלך...

בעיה	פתרון
אינה נדלקת	• ודא שמכונת הכביסה מחוברת לחשמל. • ודא שהדלת סגורה היטב. • ודא שברזי המים פתוחים. • ודא שלחצת על כפתור Start/Pause (התחל/השהה).
אינה מכילה מספיק מים או שאין בה מים כלל	• פתח את ברז המים עד הסוף. • ודא שצינור מקור המים אינו קפוא. • הדק את הצינורות של פתח כניסת המים. • נקה את המסנן על הצינור של פתח כניסת המים.
מכילה שאריות של אבקת כביסה במגירת חומרי הכביסה בתום מחזור הכביסה	• ודא שמכונת הכביסה מופעלת עם לחץ מים מספיק. • הקפד להכניס את אבקת הכביסה למרכז תא אבקת הכביסה.
רועדת או רועשת יתר על המידה	• ודא שמכונת הכביסה עומדת על משטח ישר ויציב. אם המשטח אינו מאוזן, כוונן את רגליות מכונת הכביסה כדי ליישר את המכשיר. • ודא שהסרת את בורגי ההובלה. • ודא שמכונת הכביסה אינה נוגעת בחפצים אחרים. • ודא שהכביסה פוזרה בצורה שווה בתוף.
מכונת הכביסה אינה מנקזת מים ו/או אינה סוחטת את הכביסה	• הדק את צינור הניקוז. החלף צינורות מפותלים. • ודא שמסנן הפסולת לא סתום.
הדלת נעולה או אינה נפתחת.	• הדלת תיפתח רק 3 דקות לאחר שהמכונה עוצרת את פעולתה או שהחשמל מנותק.

אם הבעיה נמשכת, פנה למרכז שירות הלקוחות של Samsung באזורך.

WF0804Y8E-02842J_HB.indd 37 2011-5-24 16:16:27

פתרון בעיות וקודי מידע

קודי מידע

אם חלה תקלה בפעולת מכונת הכביסה, אתה עשוי לראות קוד מידע על-גבי התצוגה. במקרה כזה, עיין בטבלה הבאה ונסה את הפתרון המוצע לפני שתפנה לשירות הלקוחות.

סמל קוד	פתרון
dE	• סגור את הדלת. • ודא שהדלת סגורה היטב.
4E	• ודא שברז המים פתוח. • בדוק את לחץ המים. • נקה את מסנני הרשת של צינור המים.
5E	• נקה את מסנן הפסולת. • ודא שצינור הניקוז מותקן כהלכה. • נקה את מסנן הרשת של צינור המים.
UE	• הכביסה במכונה אינה מאוזנת. פזר מחדש את הכביסה. בכביסה של פריט אחד בלבד, כגון חלוק אמבטיה או זוג מכנסי ג'ינס, תוצאות הסחיטה האחרונה עלולות להיות בלתי מספקות והודעת השגיאה "UE" תופיע בחלון התצוגה.
cE/3E/Uc	• פנה לשירות לאחר מכירה.

אם הבחנת בקוד שאינו מופיע בטבלה, או אם הפתרון המוצע לא הועיל, פנה אל מרכז שירות הלקוחות של Samsung או למשווק Samsung המקומי.

WF0804Y8E-02842J_HB.indd 38 2011-5-24 16:16:28

טבלת תוכניות הכביסה

טבלת תוכניות הכביסה (דגמים רגילים : סדרות WF08**Y** / WF08**W**)

(● אפשרות משתמש)

תוכנית	קיבולת מרבית (ק"ג)	חומר כביסה			טמפרטורה מרבית (˚C)	מהירות סחיטה מרבית (סל"ד)	
		שטיפה מקדימה	כביסה	מרכך		WF0804	WF0802
Cotton (כותנה)	8.0	●	כן	●	95	1400	1200
Synthetics (סינטטי)	3.0	●	כן	●	60	1200	1200
Denim (אריג גס)	3.0	●	כן	●	60	800	800
Bedding (מצעים)	2.0	●	כן	●	40	800	800
Dark Garment (בגדים כהים)	4.0	●	כן	●	40	1200	1200
Daily Wash (כביסה רגילה)	3.0	●	כן	●	60	1400	1200
Eco Drum Clean (ניקוי תוף ידידותי לסביבה)	-	-	-	-	70	400	400
Super Eco Wash (כביסה חסכונית במיוחד)	4.0	-	כן	●	40	1200	1200
Outdoor Care (בגדי טיול ועבודה)	2.0	-	כן	●	40	1200	1200
Baby Care (בגדי ילדים ותינוקות)	4.0	●	כן	●	95	1400	1200
Wool (צמר)	2.0	-	כן	●	40	800	800
Hand Wash (כביסה ידנית)	2.0	-	כן	●	40	400	400

תוכנית	Eco Bubble	שטיפה מוגברת	השרייה	גיהוץ קל	Delay end (השהיית סיום)	Quick Wash (כביסה מהירה)	משך המחזור (דקות)
Cotton (כותנה)	●	●	●	●	●	●	110
Synthetics (סינטטי)	●	●	●	●	●	-	80
Denim (אריג גס)	●	●	●	●	●	-	68
Bedding (מצעים)	●	●	●	●	●	-	87
Dark Garment (בגדים כהים)	●	●	-	●	●	-	73
Daily Wash (כביסה רגילה)	●	-	●	●	●	-	54
Eco Drum Clean (ניקוי תוף ידידותי לסביבה)	-	-	-	-	●	-	86
Super Eco Wash (כביסה חסכונית במיוחד)	●	●	-	●	●	-	92
Outdoor Care (בגדי טיול ועבודה)	●	-	-	-	●	-	77
Baby Care (בגדי ילדים ותינוקות)	●	●	●	●	●	-	133
Wool (צמר)	●	-	-	-	●	-	55
Hand Wash (כביסה ידנית)	●	-	-	-	●	-	31

1. מחזור כביסה עם שלב שטיפה מקדימה מתארך ב-15 דקות.
2. נתוני משך המחזור נבדקו בתנאים המפורטים בתקן EN 60456 / IEC 60456.
3. Cotton 60˚C + intensive + Eco bubble (כותנה ב-60˚C + שטיפה מוגברת + Eco bubble) היא תוכנית במפרטי EN60456.
4. Daily Wash (כביסה רגילה) : תוכנית קצרה לצורך בדיקות.
5. זמני התוכניות בבתים שונים עשויים להיות שונים מהערכים המצוינים בטבלה, עקב שינויים בלחץ ובטמפרטורת אספקת המים, בקיבולת ובסוג הכביסה.
6. כשבוחרים בפונקציה 'שטיפה מוגברת', משך המחזור מתארך בכל התוכניות.

WF0804Y8E-02842J_HB.indd 39 2011-5-24 16:16:29

טבלת תוכניות הכביסה

טבלת תוכניות הכביסה (דגמי VRT: סדרות **WF08**Z / **WF08**X)

(● אפשרות משתמש)

תוכנית	קיבולת מרבית (ק"ג)	חומר כביסה			טמפרטורה מרבית (˚C)	מהירות סחיטה מרבית (סל"ד)		
		שטיפה מקדימה	כביסה	מרכך		WF0806	WF0804	WF0802
Cotton (כותנה)	8.0	●	כן	●	95	1600	1400	1200
Synthetics (סינטטי)	3.0	●	כן	●	60	1200	1200	1200
Denim (אריג גס)	3.0	●	כן	●	60	800	800	800
Bedding (מצעים)	2.0	●	כן	●	40	800	800	800
Dark Garment (בגדים כהים)	4.0	●	כן	●	40	1200	1200	1200
Daily Wash (כביסה רגילה)	3.0	●	כן	●	60	1400	1400	1200
Eco Drum Clean (ניקוי תוף ידידותי לסביבה)	-	-	-	-	70	400	400	400
Super Eco Wash (כביסה חסכונית במיוחד)	4.0	-	כן	●	40	1200	1200	1200
Outdoor Care (בגדי טיול ועבודה)	2.0	-	כן	●	40	1200	1200	1200
Baby Care (בגדי ילדים ותינוקות)	4.0	●	כן	●	95	1400	1400	1200
Wool (צמר)	2.0	-	כן	●	40	800	800	800
Hand Wash (כביסה ידנית)	2.0	-	כן	●	40	400	400	400

תוכנית	Eco Bubble	שטיפה מוגברת	השרייה	גיהוץ קל	Delay end (השהיית סיום)	Quick Wash (כביסה מהירה)	משך המחזור (דקות)
Cotton (כותנה)	●	●	●	●	●	●	109
Synthetics (סינטטי)	●	●	●	●	●	-	82
Denim (אריג גס)	●	●	●	●	●	-	69
Bedding (מצעים)	●	●	●	●	●	-	88
Dark Garment (בגדים כהים)	●	●	-	●	●	-	75
Daily Wash (כביסה רגילה)	●	-	●	●	●	-	53
Eco Drum Clean (ניקוי תוף ידידותי לסביבה)	-	-	-	-	●	-	86
Super Eco Wash (כביסה חסכונית במיוחד)	●	●	-	●	●	-	93
Outdoor Care (בגדי טיול ועבודה)	●	-	-	-	●	-	79
Baby Care (בגדי ילדים ותינוקות)	●	●	●	●	●	-	132
Wool (צמר)	●	-	-	-	●	-	60
Hand Wash (כביסה ידנית)	●	-	-	-	●	-	31

1. מחזור כביסה עם שלב שטיפה מקדימה מתארך ב-19 דקות.
2. נתוני משך המחזור נבדקו בתנאים המפורטים בתקן IEC 60456 / EN 60456.
3. Cotton 60˚C + intensive + Eco bubble (כותנה ב-60˚C + שטיפה מוגברת + Eco bubble) היא תוכנית במפרטי EN60456.
4. Daily Wash (כביסה רגילה) : תוכנית קצרה לצורך בדיקות.
5. זמני התוכניות בבתים שונים עשויים להיות שונים מהערכים המצוינים בטבלה, עקב שינויים בלחץ ובטמפרטורת אספקת המים, בקיבולת ובסוג הכביסה.
6. כשבוחרים בפונקציה 'שטיפה מוגברת', משך המחזור מתארך בכל התוכניות.

WF0804Y8E-02842J_HB.indd 40 2011-5-24 16:16:29

נספחים

טבלת טיפול בבדים

הסמלים הבאים מספקים הוראות לטיפול בבדים. תוויות הוראות הכביסה כוללות ארבעה סמלים על-פי הסדר הבא: כביסה, הלבנה, ייבוש וגיהוץ (וניקוי יבש בעת הצורך). השימוש בסמלים מבטיח עקביות בקרב יצרני הבדים המקומיים והמיובאים. פעל בהתאם להוראות המופיעות על תווית הוראות הכביסה כדי להאריך ככל הניתן את חיי הפריט ולהפחית את הבעיות בכביסה.

חומר עמיד		ניתן לגיהוץ בטמפ. מרבית של 100˚C	
בד עדין		אין לגהץ	
ניתן לשטוף את הפריט בטמפ. של 95˚C	A	מתאים לניקוי יבש עם כל ממיס	
ניתן לשטוף את הפריט בטמפ. של 60˚C	P	מתאים לניקוי יבש עם פרכלוריד, גז מצתים, אלכוהול טהור או R113 בלבד	
ניתן לשטוף את הפריט בטמפ. של 40˚C	F	מתאים לניקוי יבש עם דלק מטוסים, אלכוהול טהור או R113 בלבד	
ניתן לשטוף את הפריט בטמפ. של 30˚C		לא מתאים לניקוי יבש	
ניתן לכביסה ביד		ייבוש במצב שטוח	
לניקוי יבש בלבד		ניתן לתלות לייבוש	
ניתן להלבנה במים קרים		ייבוש על קולב	
אין להלבין		ייבוש במייבש, חום רגיל	
ניתן לגיהוץ בטמפ. מרבית של 200˚C		ייבוש במייבש, חום מופחת	
ניתן לגיהוץ בטמפ. מרבית של 150˚C		אין לייבש במייבש	

שמירה על הסביבה

- מכשיר זה מיוצר מחומרים הניתנים למיחזור. אם תחליט להשליך מוצר זה, עליך לפעול על-פי התקנות המקומיות להשלכת פסולת. חתוך את כבל החשמל כך שלא ניתן יהיה לחבר את המכשיר למקור מתח. הסר את הדלת כדי שבעלי חיים וילדים קטנים לא יילכדו בתוך המכשיר.
- אל תחרוג מכמויות אבקת הכביסה המומלצות כפי שהופיעו בהוראות היצרן.
- השתמש בתכשירים להסרת כתמים ובמלבינים לפני הכביסה רק כאשר יש בכך צורך.
- חסוך מים וחשמל על-ידי הפעלת המכונה עבור כביסות מלאות בלבד (הכמות המדויקת תלויה בתוכנית שנבחרה).

הצהרת תאימות

מוצר זה תואם לתקני הבטיחות האירופיים, הנחיית EC מס' 93/68 ותקן EN Standard 60335.

WF0804Y8E-02842J_HB.indd 41 2011-5-24 16:16:33

נספחים

מפרטים

סוג			מכונת כביסה בעלת פתח קדמי	
ממדים			WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
			598 מ"מ (ר) X 600 מ"מ (ע) X 844 מ"מ (ג)	
לחץ מים			50 kPa ~ 800 kPa	
נפח מים			52 ℓ	
משקל נטו			WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
			69 ק"ג	
קיבולת כביסה וסחיטה			8.0 ק"ג	
צריכת חשמל		דגם	WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
		כביסה	220 וולט	150 ואט
			240 וולט	150 ואט
		כביסה וחימום	220 וולט	2,000 ואט
			240 וולט	2,400 ואט
	סחיטה	דגם	WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
		230 וולט	350 ואט	
		שאיבה	34 ואט	
משקל האריזה		דגם	WF0802W8/WF0804W8 WF0802Y8/WF0804Y8	
		נייר	1.9 ק"ג	
		פלסטיק	1.2 ק"ג	
סיבובי סחיטה		דגם	WF0804W8/ WF0804Y8	WF0802W8/ WF0802Y8
		סל"ד	1400	1200

מראה המוצר ומפרטיו נתונים לשינוי ללא הודעה מראש, לטובת שיפור המוצר.

WF0804Y8E-02842J_HB.indd 42 2011-5-24 16:16:34

מפרטים

סוג			מכונת כביסה בעלת פתח קדמי		
ממדים			WF0802X8/WF0804X8/WF0806X8 WF0802Z8/WF0804Z8/WF0806Z8		
			598 מ"מ (ר) X 600 מ"מ (ע) X 844 מ"מ (ג)		
לחץ מים			50 kPa ~ 800 kPa		
נפח מים			52 ℓ		
משקל נטו			/WF0806X8 WF0806Z8	WF0804X8/WF0802X8 WF0804Z8/WF0802Z8	
			72 ק"ג	71 ק"ג	
קיבולת כביסה וסחיטה			8.0 ק"ג		
צריכת חשמל	דגם		WF0802X8/WF0804X8/WF0806X8 WF0802Z8/WF0804Z8/WF0806Z8		
	כביסה		220 וולט	150 ואט	
			240 וולט	150 ואט	
	כביסה וחימום		220 וולט	2,000 ואט	
			240 וולט	2,400 ואט	
	סחיטה	דגם	WF0802X8/WF0804X8/WF0806X8 WF0802Z8/WF0804Z8/WF0806Z8		
		230 וולט	350 ואט		
	שאיבה		34 ואט		
משקל האריזה	דגם		WF0802X8/WF0804X8/WF0806X8 WF0802Z8/WF0804Z8/WF0806Z8		
	נייר		1.9 ק"ג		
	פלסטיק		1.2 ק"ג		
סיבובי סחיטה	דגם		/WF0806X8 WF0806Z8	/WF0804X8 WF0804Z8	/WF0802X8 WF0802Z8
	סל"ד		1600	1400	1200

מראה המוצר ומפרטיו נתונים לשינוי ללא הודעה מראש, לטובת שיפור המוצר.

WF0804Y8E-02842J_HB.indd 43 2011-5-24 16:16:34

שאלות או הערות?יצירת קשר עם Samsung ברחבי העולם

אם יש לך שאלות או הערות כלשהן בנוגע למוצרי Samsung, פנה למרכז התמיכה בלקוחות של Samsung.

Code No. DC68-02842J_HB